



# **ADJUSTABLE SEAT**

MODEL NO: CMS2

PART NO: 7630199

**USER INSTRUCTIONS** 

GC0715

## INTRODUCTION

Thank you for purchasing this CLARKE Mechanics Adjustable Seat.

Before attempting to use the product, it is essential that you read this manual thoroughly and carefully follow all instructions given. In doing so you will ensure the safety of yourself and that of others around you, and you can also look forward to the product giving you long and satisfactory service.

## **GUARANTEE**

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for its intended purpose.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission. This guarantee does not effect your statutory rights.

#### SAFETY PRECAUTIONS

- 1. Use your mobile seat for any task where you would normally sit or kneel, ensuring the floor surface is hard enough that the castors do not sink in.
- 2. Have any damaged parts repaired or replaced immediately. Use genuine Clarke parts only. The use of unauthorised parts may be dangerous and will invalidate the guarantee.
- 3. Never or climb on, stand on, or attempt to ride on the seat or use it to transport heavy objects.

# **UNPACKING & ASSEMBLY**

Unpack and lay out all components, checking for any damage which may have occurred during transit, and ensuring that all parts are accounted for by checking against the parts list. Should there be any deficiency or damage, please contact your Clarke dealer immediately. The seat is packed as three components;- the seat itself with operating lever, the lifting ram, and the base complete with casters. The base doubles as a tool tray.

- 1. To assemble the seat, simply push the ram into the hole in the centre of the base, ensuring it is perpendicular, then locate the seat on top of the ram.
- 2. Sit on the seat and lift up the operating lever to lower the seat. To raise the seat, take your weight off the seat slightly and pull the lever.
- The seat is maintenance free, but should any damage occur, spare parts are available from Clarke International, details of which are shown on the reverse.

Check that all nuts, including those securing the castors and base frame are tight and secure before using this seat.

Your adjustable seat is now ready for use.

#### COMPONENT PARTS OF THE SEAT

No	Description		
1	Seat Cushion		į
2	Support Plate		
3	Hub		
4	Ram		
5	Base/Tool Tray		
6	Castor (2.5")		(2) (1)
7	Operating Lever		
Α	M6x20 Truss Head Screw		
В	Cap Nut		(A) - 7
С	Lockwasher		3
D	Rivet 3X18		
When requesting spare parts please quote SN/CMS2/01 to 7.			4 B C 5
FEATURE		RATING	6
Height Range		380 - 490 mm	
Net Weight		7 kg	
Dimensions		380 x 380 x 490 mm	



E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

CIANTE INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG www.clarkeinternational.com