

A SELECTION FROM THE VAST RANGE OF

ClarkeTM

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial. Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need.

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

POWER TOOLS

Angle grinders, cordless drill sets, saws and sanders.

STARTER/CHARGERS

All sizes for car & commercial use.



Clarke[®]

STRONG-ARM



MODEL CST6

PART No 6500137

Clarke[®] INTERNATIONAL

For spare parts and servicing, please contact your nearest dealer, or Clarke International on

020 - 8988 - 7400

e-mail: Parts@clarkeinternational.com e-mail: Service@clarkeinternational.com

ASSEMBLY & USER INSTRUCTIONS





Thank you for purchasing this **CLARKE** Strong-Arm Sack Truck.
 Before using the truck, please read this leaflet thoroughly and carefully follow all instructions given. This is for your own safety and that of others around you, and is also to help you achieve a long and trouble free service from your new truck.

CLARKE GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase.


This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not affect your statutory rights.

Check List

1. Main Frame Assembly x 1
2. Stub Axle Assembly x 2
3. Wheel Assembly x 2
4. Caster x 1
5. Platform x 1
6. One bag containing nuts, bolts, pins and washers.

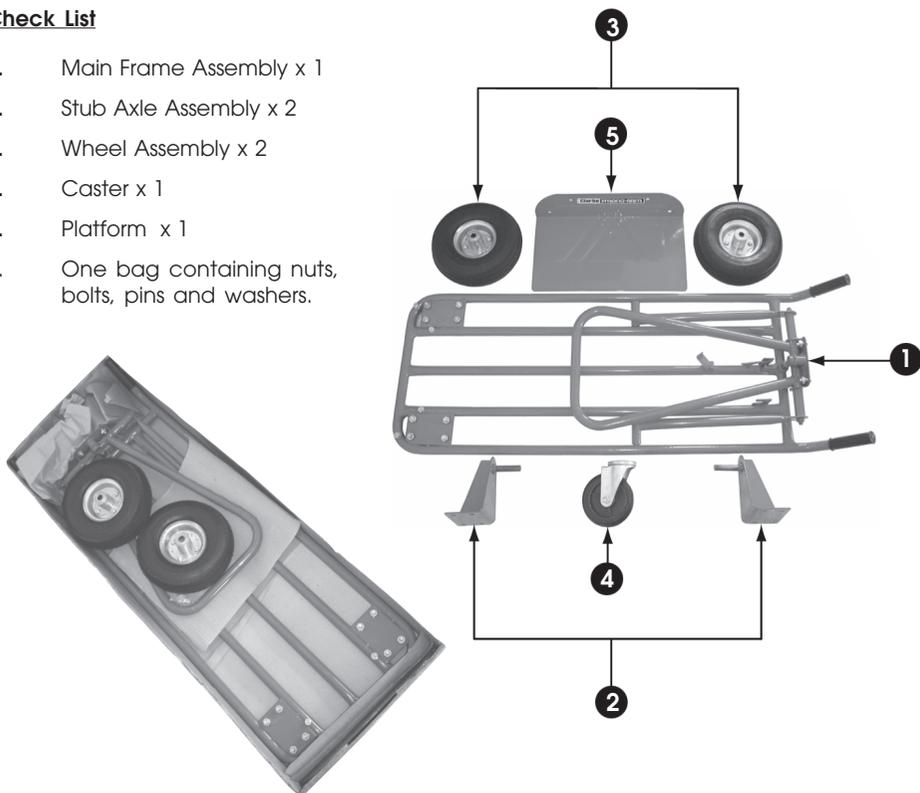

SAFETY PRECAUTIONS



WARNING! Read these safety instructions before using the equipment.

- **BEFORE** attempting to transport any load, ensure you are physically able to do so.
- **DO NOT** exceed the maximum working load for the truck - **250kg Vertically - 300kg Horizontally**
- **DO NOT** leave the truck on a gradient without first securely chocking the wheels.
- **DO NOT** allow children to play with or ride on the truck.
- **DO NOT** leave the truck on any steep inclines.
- **NEVER** use the truck if any of the tyres are deflated....inflate them immediately.
- **NEVER** use the truck to transport personnel or animals.
- **ALWAYS** inspect the truck for signs of wear or damage before using.
- **ALWAYS** ensure the load is evenly distributed and is perfectly stable.

ASSEMBLY

Tools Required 17mm spanner x2, 14mm spanner, flat bladed screwdriver

NOTE: when attaching parts, ensure all bolts are fitted before final tightening.

Attach stub axles (2) to the main frame (1) using the nuts bolts and washers supplied.,



Fig.1

Attach caster (4) using nuts bolts and washers supplied



Fig.3

Attach wheels (3) to the axles (2) and secure with washer and split pin.



Fig.2

Attach platform (5) using nuts screws and washers supplied,



Fig.4

Check and tighten all nuts and bolts

Spare Parts.

Wheel Part No. CST6
 Caster CST6001
 Hand Grip CST6002
 Inner Tube CST6002

PARTS & SERVICE TEL: 020 8988 7400

or e-mail as follows:

PARTS: Parts@clarkeinternational.com

SERVICE: Service@clarkeinternational.com