

LOCKABLE WALL CABINET

MODEL NO: CWC38

PART NO: 7642000

ASSEMBLY INSTRUCTIONS

((

LS0814

INTRODUCTION

Thank you for purchasing this CLARKE product.

Before attempting to use this product, please read this manual thoroughly and follow the instructions carefully. In doing so you will ensure the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.


Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

SPECIFICATION


Dimensions (w x d x h)	380 x 190 x 600 mm
Maximum Load Per Shelf	5 kg
Maximum Load Total	15 kg

CONTENTS

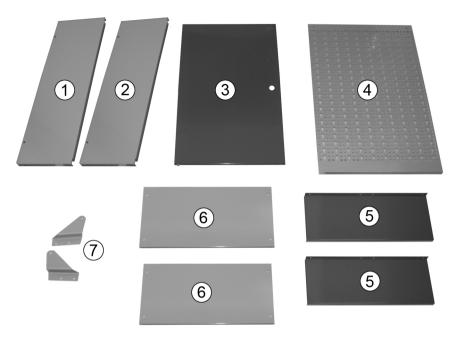

1	Left Panel
2	Right Panel
3	Door
4	Rear Panel
5	Shelf
6	Top/Bottom Panel
7	Wall Hanging Brackets
8	Fixings kit (not shown) Includes
	24 Machine Screws
	• 24 Bolts
	• 24 Washers
	Door Knob
	Lock Assembly and Key
	2 x 45mm screws and rawl plugs

ASSEMBLY

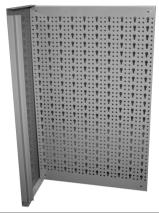

Place the left panel against the rear panel and use the fixings (machine screws, bolts and washers) supplied to secure.




2. Repeat with the right panel and the bottom panels.



 Set the door in place as shown making sure that the hinge pin is inserted into the hole on the bottom panel.



- 4. Fit the top panel and secure in place using the fixings supplied.
- The hinge pin on top of the door must be inserted into the hole in the top panel.

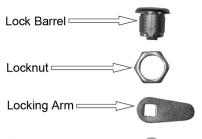

Washer _____

Star Washer >

Screw

- Place the key in the lock and turn it so that the window on the front of the lock turns green.
- 6. Remove the screw and star washer from the rear of the lock.
- 7. Remove the washer and locking arm.
- 8. Remove the locknut from the lock barrel.



9. Insert the lock barrel with the green window at the top through the door and secure using the locknut as shown.




 Replace the locking arm and washer and secure using the star washer and screw.



- 11. Check the lock and if necessary adjust the orientation of the locking arm
- 12. Fit the door knob.




13. If you are fitting the shelves, place the shelves into position and secure using the fixings supplied.

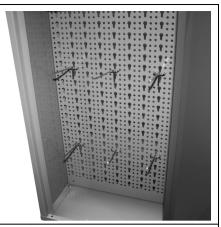

14. If you are using tool hooks, place the tool hooks onto the rear panel.

15. A coimbination of shelves and tools is also possible.

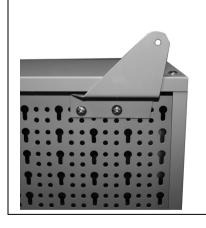

- 16. Fit the wall hanging bracket as shown (one on each side).
- 17. Fix the cabinet to the wall using suitable screws (2" minimum) and use rawl plugs suitable for the wall being fixed to.

ALSO AVAILABLE FROM Clarke



TWO DOOR TALL LOCKER CABINET

- 3 adjustable shelves
- Robust steel construction
- Includes door lock with 2 keys

Model No. CC76 Model No. 7642030



WORKBENCH WITH LOCKABLE CUPBOARD

- Drawer and lockable cupboard for secure storage of workshop equipment
- Durable powder coated finish

Model No. CWB57 Model No. 7642010



LOCKABLE WALL CABINET

- Integral hanging brackets for easy wall mounting
- Durable powder coated finish
- Robust steel construction


Model No. CWC38 Model No. 7642000





- Secure storage of hand and power tools
- Extra thick 30mm worktop

Model No. CWB114 Model No. 7642015

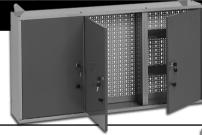

1140mm (45") 3 DOOR LOCKABLE WALL CABINET


- •3 separate lockable compartments (2 Keys each)
- Two compartments with adjustable shelves
- Hanging brackets for easy wall mounting

Model No. CWC114 Model No. 7642005

1140mm (45") WIDE WALL MOUNTED TOOL RACK

- Keyhole slots allow wrench holders, hooks and clips to be positioned as required
- 3 individual panels make up a large 1140x596mm rack

Model No. CWR45C Model No. 7642025

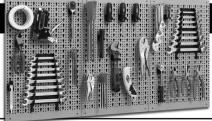



PARTS & SERVICE: 0208 988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

CIAPE INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG www.clarkeinternational.com