


Glantube®

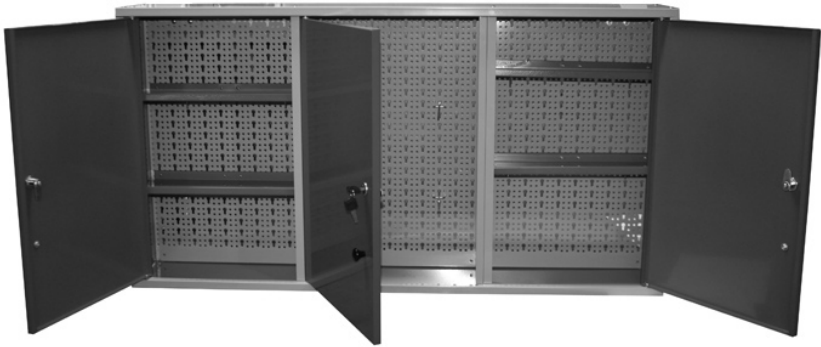

3 DOOR LOCKABLE WALL CABINET MODEL NO: CWC114

PART NO: 7642005

ASSEMBLY INSTRUCTIONS



LS0814

INTRODUCTION

Thank you for purchasing this CLARKE product.

Before attempting to use this product, please read this manual thoroughly and follow the instructions carefully. In doing so you will ensure the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.


Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

SPECIFICATION


| | |
|------------------------|---------------------|
| Dimensions (w x d x h) | 1140 x 190 x 600 mm |
| Weight | 19.5 kg |
| Maximum Load Per Shelf | 5 kg |
| Maximum Load Total | 40 kg |

WHATS SUPPLIED

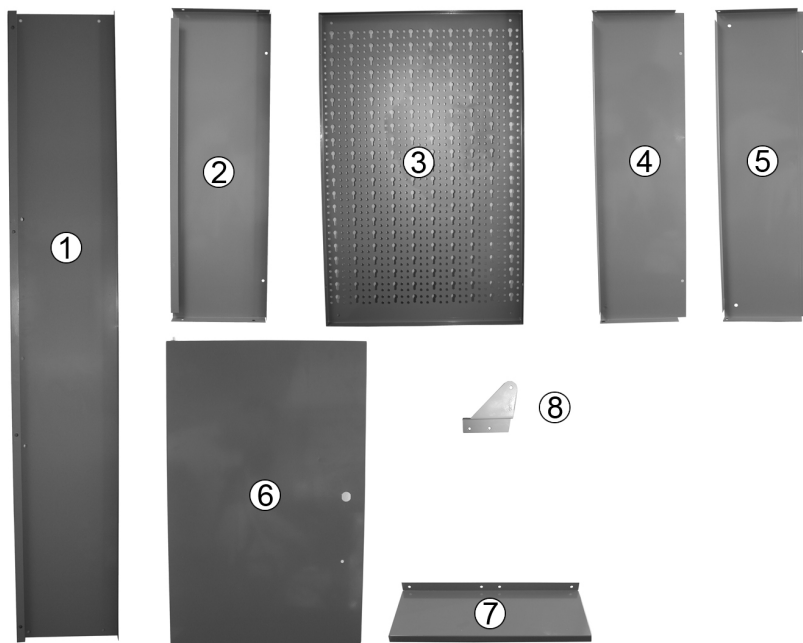

| No | Description | Qty |
|----|---|-----|
| 1 | Top/Bottom Panel | 2 |
| 2 | Side Panels | 2 |
| 3 | Rear Panel | 3 |
| 4 | Left divider Panel | 1 |
| 5 | Right divider Panel | 1 |
| 6 | Door (the centre door with a tool rack on the inside.) | 3 |
| 7 | Shelf | 4 |
| 8 | Wall Hanging Brackets | 2 |
| 9 | Fixings kit (not shown) Includes <ul style="list-style-type: none"> • 32 x M5x10 round head bolt set (bolt, washer, nut) • 3 x M5x8 round head bolt set (bolt, washer, nut) • 2 x M5x45 self tapping screw and rawl plug • 3 Door Knobs • 3 Lock Assemblies and Keys | |


ASSEMBLY

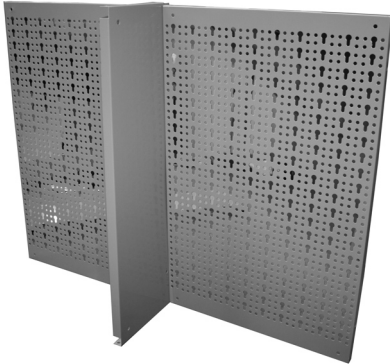


1. Place the left divider between two rear panels as shown.




2. Use the fixings (nuts bolts and washers) supplied, to secure in place.

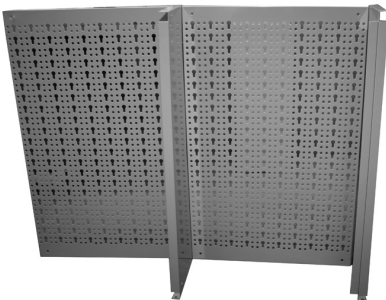


3. Place the right divider against the right panel as shown.

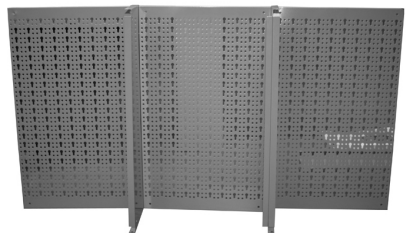

4. Place the final rear panel against the right divider and use the fixings (nuts bolts and washers) supplied to secure in place.

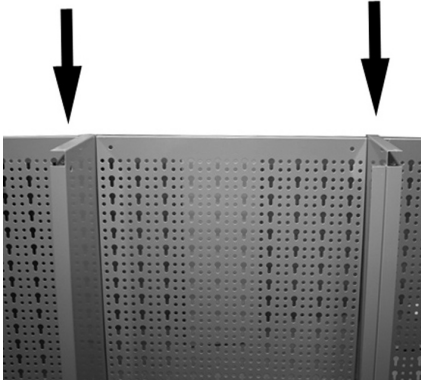

5. Make sure that the left and right dividers are orientated as shown above.

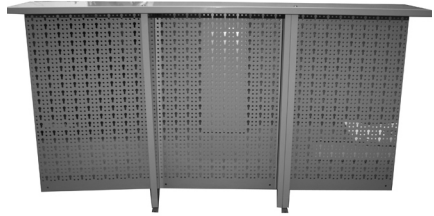

6. Place the top panel in place and use the fixings (nuts bolts and washers) supplied to secure in place.

7. Repeat this with the bottom and two side panels.

- Do not tighten fully at this stage.



 
8. Lift the top slightly and insert the doors as shown.

- The hinge pins on the door must be inserted into the holes in the top and bottom panels.




9. Fully tighten all fixings.

Lock Barrel




Locknut

 


Locking Arm



 Washer



Star Washer

 

Screw




10. Place the key in the lock and turn it so that the window on the front of the lock turns green.
11. Remove the screw and star washer from the rear of the lock.
12. Remove the washer and locking arm.
13. Remove the locknut from the lock barrel.


14. Insert the lock barrel (with the green window at the top) through the door and secure using the locknut as shown.



15. Replace the locking arm and washer and secure using the star washer and screw.

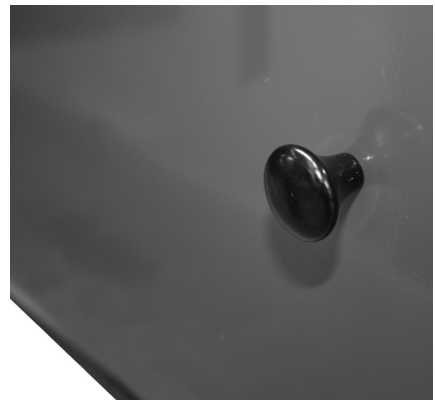

16. Check the lock and if necessary adjust the orientation of the locking arm.
17. Fit the door knob.

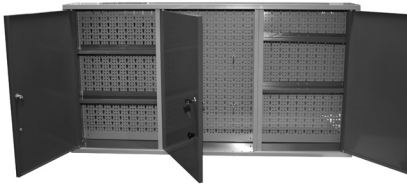


18. Place the shelves into position and secure using the fixings supplied.



19. Place the tool hooks onto the rear panel .

20. A combination of shelves and tools is also possible.

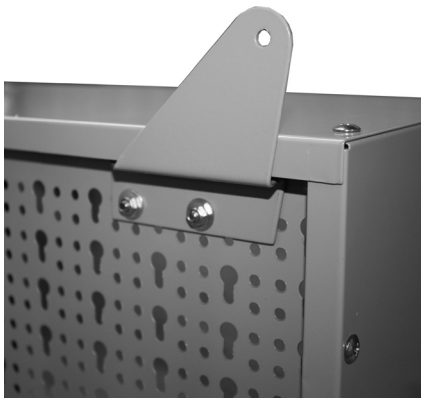

21. Fit the wall hanging bracket as shown (one on each side).

22. Fix the cabinet to the wall using suitable screws (2" minimum) and use rawl plugs suitable for the wall being fixed to.

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS


Submersible, electric and engine driven for DIY, agriculture and industry.

POWERTOOLS

Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS

All sizes for car and commercial use.

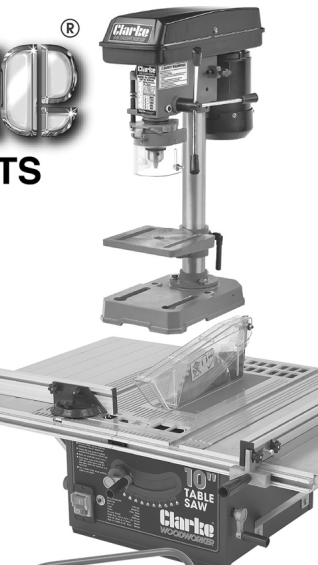

PARTS & SERVICE: 0208 988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke INTERNATIONAL Hemhall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com