

Clarke®



INSTANT GARAGE

MODEL NO: CIG81212 (12 X 12 X 8')

PART NO: 3503584

ASSEMBLY INSTRUCTIONS

ORIGINAL INSTRUCTIONS

GC10/25 - Iss 2

INTRODUCTION

Thank you for purchasing this CLARKE Instant Garage.

Before attempting to use this product, please read this manual thoroughly and follow the instructions carefully. In doing so you will ensure the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

SAFETY WARNINGS



WARNING: READ THESE SAFETY INSTRUCTIONS TO REDUCE THE RISK OF INJURY. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

DO NOT use this product in environments for which it is not Intended (i.e. extreme cold, high winds, extreme heat, heavy rainfall, etc).

DO NOT use open flames or cooking or heating devices inside or in close proximity to the garage including all types of stoves, gas heaters, gas lanterns, torches, fly killers, etc. The fabric will burn if left in continuous contact with a naked flame.

DO NOT store flammable liquids (petrol, kerosene, propane, etc.) in the garage or operate gas powered vehicles/equipment in or around the garage.

POSITIONING AND INSTALLATION

POSITIONING THE GARAGE

This garage is a temporary structure and is not recommended as a permanent building. It is designed to offer protection from sun, rain, light snow, tree sap and bird droppings etc. It is not designed to shelter equipment from excessively high winds or heavy snow.

Choose your garage location carefully. Check for overhead power lines, tree branches, etc. DO NOT install near roofs or other structures that may shed snow, ice or excessive run-off onto your garage.

SITING THE GARAGE

Erect your garage on level ground over a firm, level area. Allow enough space near each corner for the ground anchors and tie-down straps supplied to be used as intended. If the ground area is of tarmac or concrete, the use of ground anchor holding-down bolts will be required to anchor the garage to the floor.

Choose a dry location where dampness arising from ground water in the environment will not undermine the protection offer by the garage.

A masonry floor such as block paving or concrete is ideal, but if this is not being supplied, a timber or shuttering plywood floor, protected by a suitable groundsheet should be used. This will help to create a dry storage environment by insulating the storage space from ground moisture.

Proper anchoring and keeping the cover tight and free of snow and debris is the responsibility of the user. Damage caused by improper anchoring is not covered under warranty.

CARE OF THE GARAGE STRUCTURE

This garage is NOT designed to support heavy snow. Snow or ice accumulation may cause your garage to collapse. To avoid overloading, brush snow and ice off the roof top with a broom or mop to prevent collapse with the resultant damage to property or personal injury.

NEVER clear the roof of snow or debris from inside the garage.

DO NOT use hard-edged tools or instruments, such as rakes or shovels to remove snow. These can cause punctures to the cover.

DO NOT use bleach, alkaline or harsh detergents for cleaning. Doing so will damage the material. Soap and warm water are recommended.

In order to reduce risk of burning and avoid damage, DO NOT- cook, smoke, refuel or use any open flame devices in or around the garage.

USING THE STORAGE SPACE

Never run the engine of any vehicle or machine inside a closed garage. Ensure that there is adequate ventilation for engines or for any work with paints, chemical cleaning agents. etc. by opening the door panel and keeping it raised as shown in diagram M on page 14.

CONDENSATION

Take steps to avoid the buildup of condensation inside the garage. Cool, damp winter days and moisture from the breath and body heat of personnel may cause condensation on the inside of the top cover of the garage.

A supply of fresh air through the doorway will at least partly remove this issue.

For long term storage of moisture sensitive belongings in all weathers, the use of a Dehumidifier may be required, such as those in the CLARKE range. A suitable extension lead to a locally available power supply will be required. Condensation will be much less of an issue during the summer months.

If storing a vehicle in your garage over the winter months we recommend the use of a secondary lightweight cover over your vehicle.

CONSTRUCTION

 
 
 
Have an overview of all parts before attempting installation and make sure all required components are supplied.

TOOLS REQUIRED

Tools required for assembly (not included)



COMPONENT PARTS LIST

Part#	Description	Drawing	Qty.
1	Leg Tube(Top Part)		8
2	Center extension tube		4
3	Leg Tube(Corner Bottom Part)		4
4	Rafter tube 1		8
5	Rafter tube 2		8
6	Shoulder Horizontal Tube		9
7	Bottom Cover Rail		6
8	3-Way Side Connector -Left		2
9	3-Way Side Connector -Right		2
10	Bent Corner Leg		4
11	4-Way Side Connector		4
12	3-Way Peak Connector		2
13	4-Way Peak Connector		2
14	4-Way Cover Rail Clamp		8
15	3-Way Cover Rail Clamp		8
16	15" Anchor		4
17	Cable-1'Lengths		4
18	Cable Clamps		4
19	Foot Plate		4
20	Pin		4
21	Open Pin		4
22	M6X45 Bolts		8
23	M6X40 Bolts		12
24	M6 Washer		20
25	M6 Nuts		20
26	Roof Tarp		1
27	Door Panel with Zipper		1
28	Back Panel		1
29	Ratchet		8

ASSEMBLY




WARNING: DO NOT PLACE THE PRODUCT UNDER TREES FROM WHICH HARD FRUIT SUCH AS APPLES, WALNUTS OR HEAVY PINE CONES, ETC MAY FALL. KEEP CHILDREN AWAY DURING ASSEMBLY. THIS PRODUCT CONTAINS SMALL PARTS WHICH CAN BE SWALLOWED BY CHILDREN. DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT IF ANY PARTS ARE MISSING.

WARNING: AT LEAST 3 PEOPLE ARE NEEDED TO COMPLETE THE ASSEMBLY AS SOME OF THE STEPS REQUIRE HEAVY LIFTING.

WARNING: DO NOT LEAVE THE GARAGE UNATTENDED DURING ASSEMBLY IN CASE PERSONAL INJURY OR DAMAGE MAY OCCUR.

1. Place all parts in a clear area and arrange them on the ground.
2. Remove all packaging materials and store them back in the box. Do not dispose of the packaging materials until assembly is complete.


Diagram A

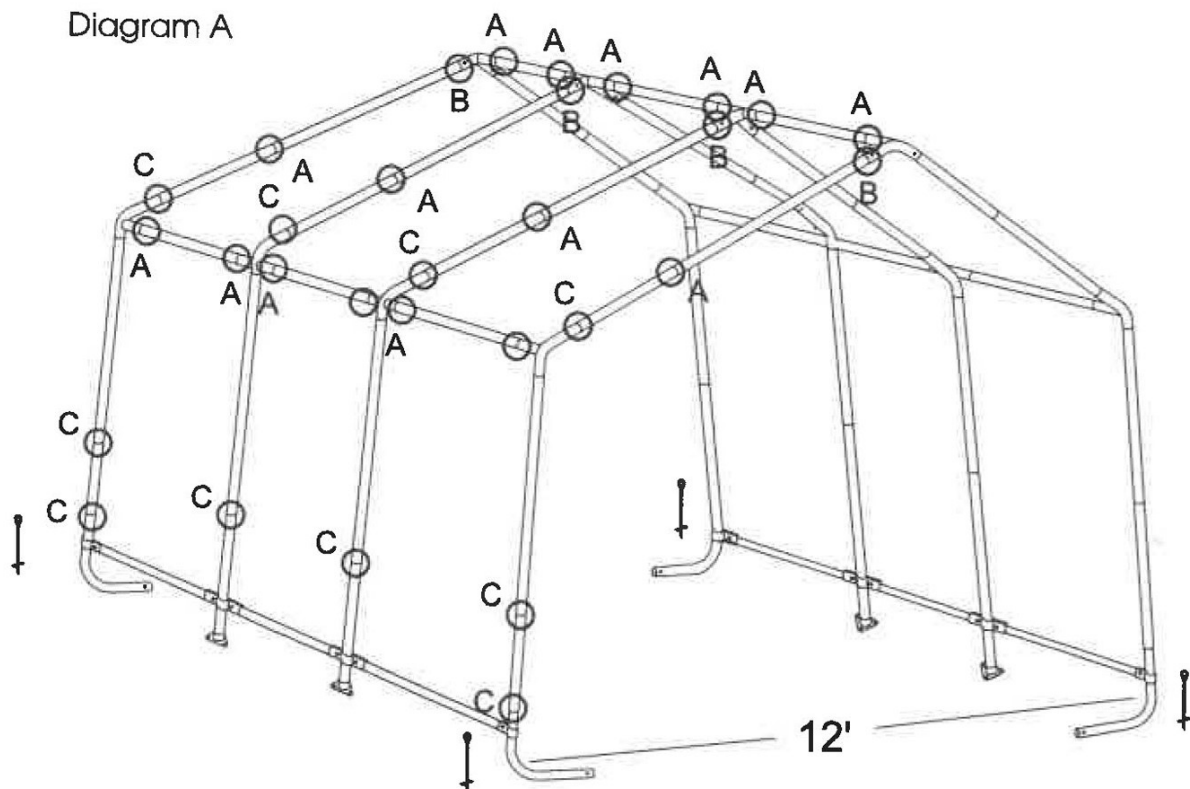

3. The diagram above shows which type of connection is required for each part of the frame assembly.
 - Joint A is a spring button connection
 - Joint B is connected with a nut and bolt
 - Joint C is a simple push fit

STEP 1: PREPARING THE ROOF PARTS


Select a suitable location for the garage. The layout of the roof parts is shown in Diagram B.

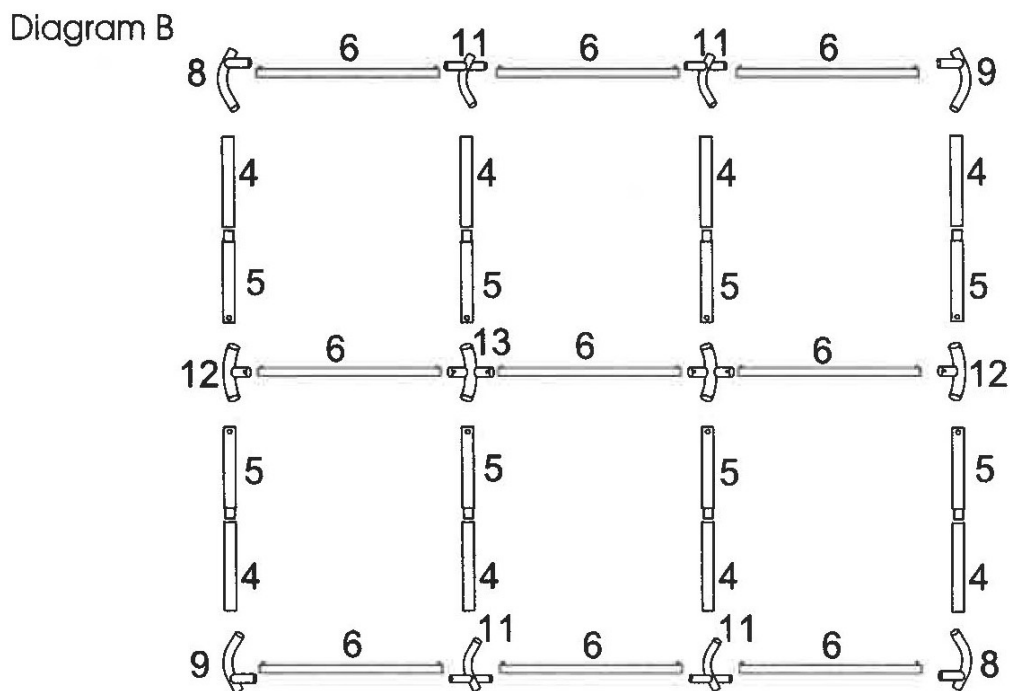



Note the differences between the connectors shown in Diagram C. (Connectors are also individually numbered). Note: When installed, the welded socket for the cross rail must be below the bend.

Parts #8, #9 and #11 are side (shoulder) connectors.

Parts #12 and #13 are top (apex) connectors.

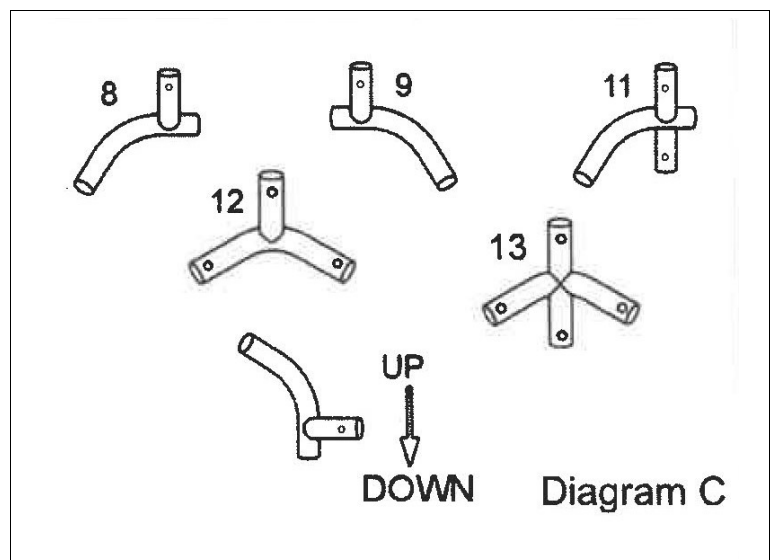

STEP 2: ASSEMBLING THE ROOF

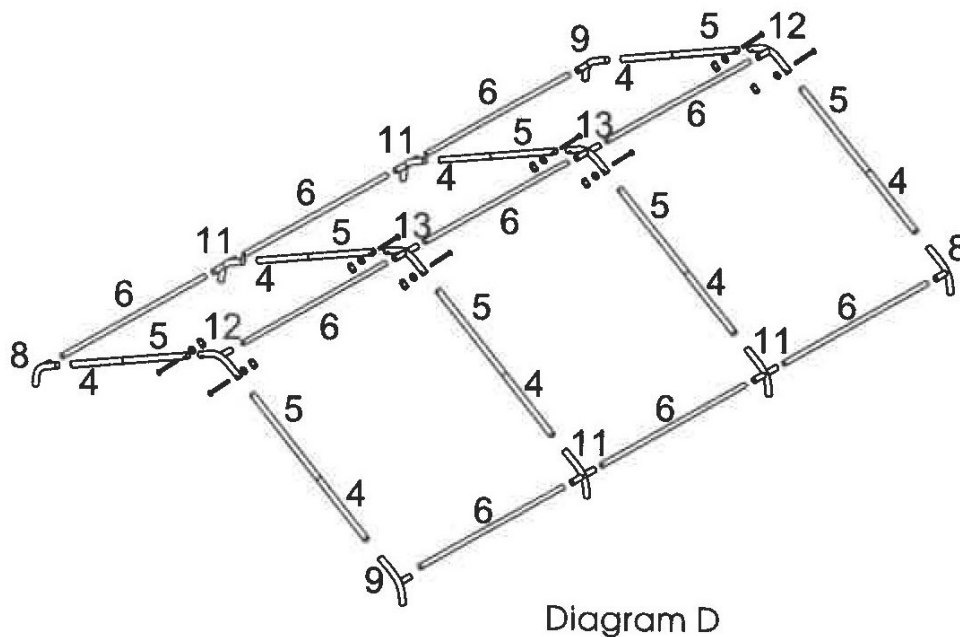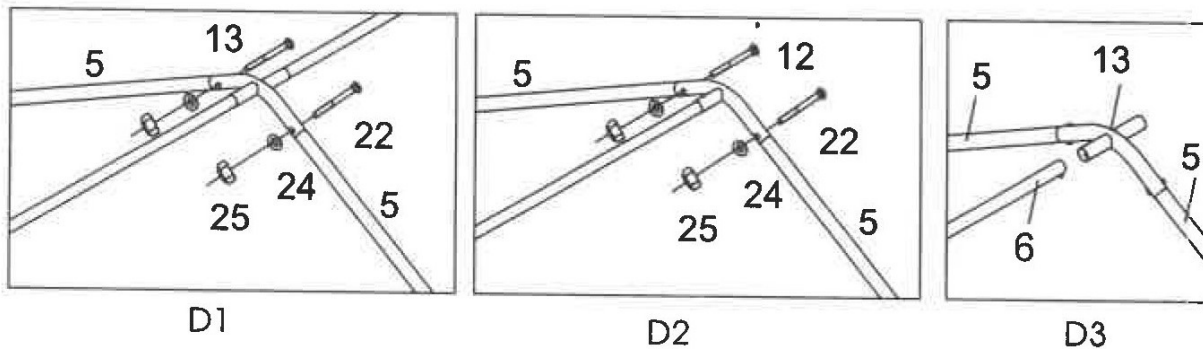

1. Assemble the roof frame by connecting the parts layout above.
2. Connect one end of Part #5 with Part #4 using the spring button.
3. Connect the other end of Part#5 with Parts #12 & #13 (See Diagram D1 & D2) by the fittings #22, #24 & #25.
 - There is a spring button on both ends of Part #6. Ensure the button pops up when connecting with parts #8, #9 & #11.


NOTE: Be sure that all tubes are fully inserted. Use a rubber mallet if necessary.

STEP 3: ATTACHING THE LEGS

There are 8 legs for the whole garage.

1. Follow figure E1. Connect the tubes #1, #3 & #10 to create the 4 corner legs.
2. Connect tubes #1 & #2 to create the 4 center legs.

Diagram E

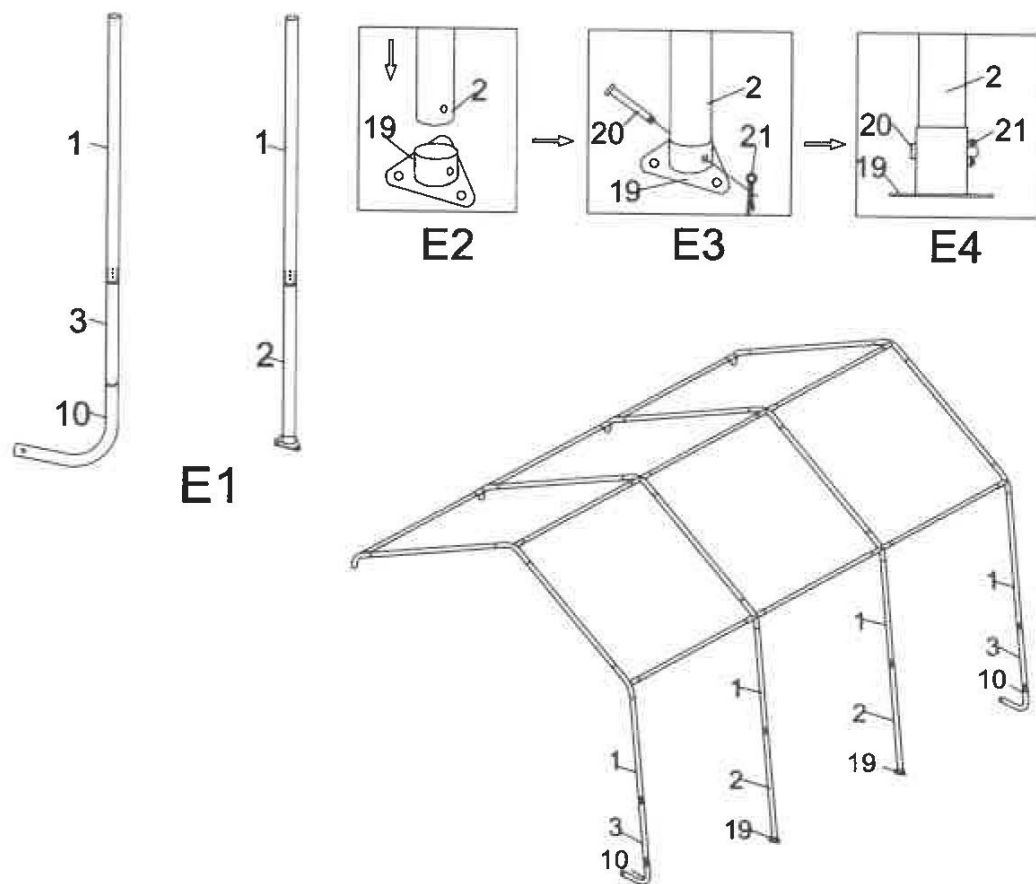

3. Insert the center legs into the foot plate (#19), Align the holes in the tube and foot plate, push the pin (#20) through all the holes, insert the open pin (#21) and split the tongues of the split pin with a flat screwdriver to secure this connection. (See diagrams E2, E3 & E4.)
4. Insert the centre legs and corner legs into the side connectors as in Diagram E.
5. Repeat to assemble the other side as shown in Diagram E.

STEP 4: SQUARE AND ANCHOR THE FRAMES



WARNING: SERIOUS INJURY TO PERSONS OR PROPERTY COULD RESULT IF THE GARAGE IS NOT SECURELY ANCHORED WITH EITHER THE GROUND ANCHORS SUPPLIED, OR IF SITED ON CONCRETE OR TARMAC, USE SUITABLE SUBSTANTIAL GROUND ANCHOR BOLTS.

1. Check that the width measurements of the frame are 12' at both the front and back corners, as well as across the center.


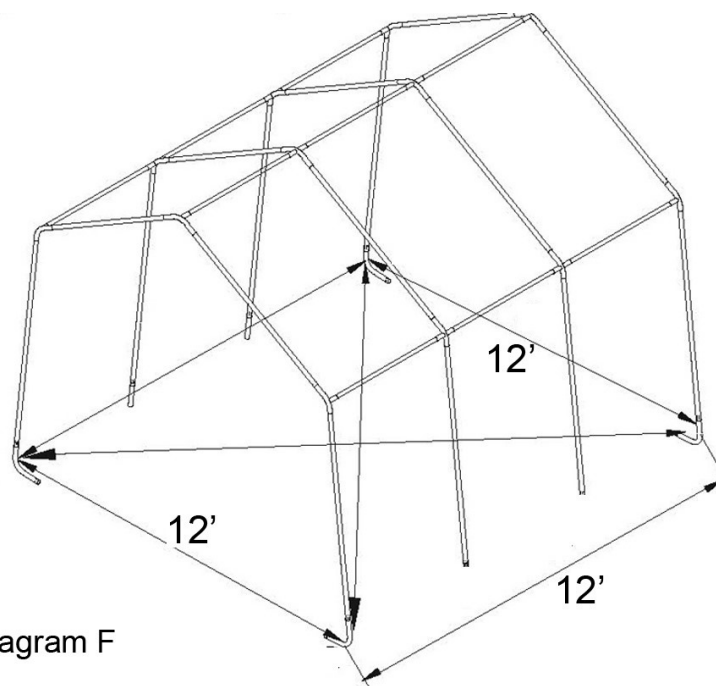


Diagram F

2. Take a diagonal measurement as shown above. When the two measurements are equal the frame is square. Adjust the frame until they are equal to within 1".
3. Once equal, check the width measurement again to ensure all sides are equal at 12'.
4. Next, install the anchors (Parts #16, #17 & #18) at the 4 corner legs by screwing the anchor (#16) into the ground on the inside of the structure.
5. Secure with the cable (#17) and cable clamp (#18) as shown in Diagram G.
 - **Ensure the clamps are gripping the cable securely.**

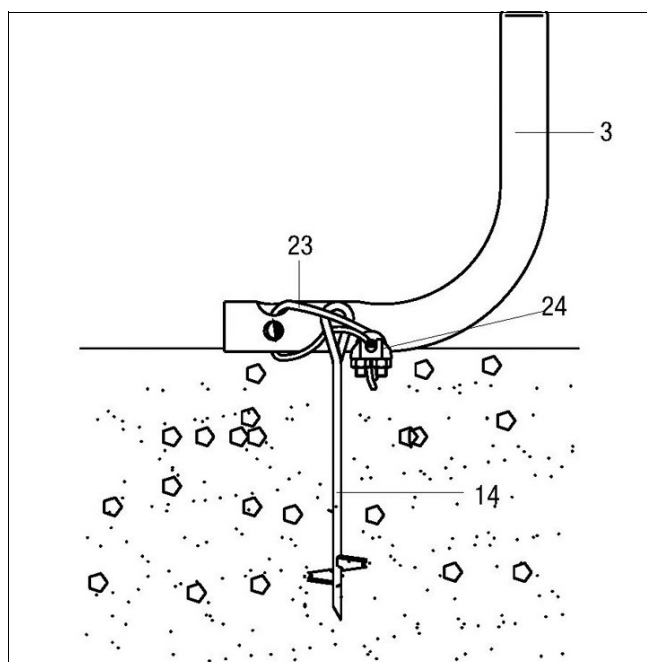


STEP 5: INSTALLING THE FRONT AND BACK COVERS

The front cover has a zippered door to allow entry to the shelter. Be sure to locate this cover at the desired end and ensure the zipper is in the closed position while installing.


The back cover is a solid piece of fabric.

Both covers are installed in the same manner.

Diagram H

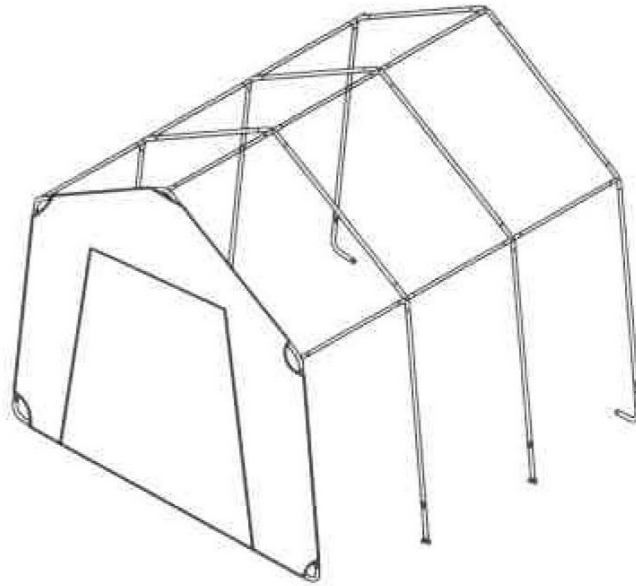

1. To make sure the strap will stay in the sleeve when assembled, thread the strap through the spindle of the ratchet. Raise and lower the handle two or three times to wind the strap onto the spindle as shown in Diagram I below.

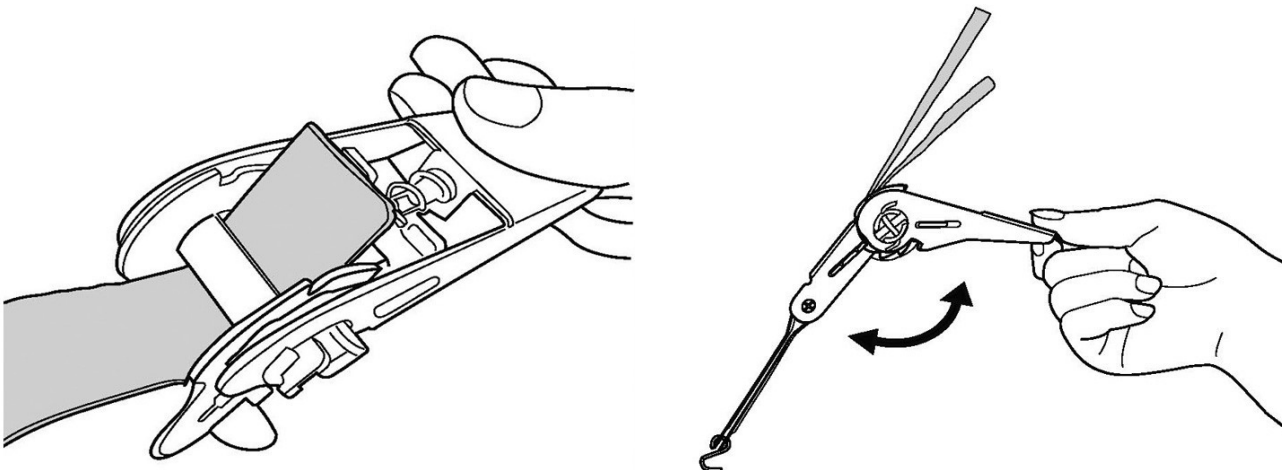

2. Begin with the front cover and first locate the webbed strap that runs around the perimeter of the cover.
 - The webbing is exposed at the peak, the shoulders, and the feet of the cover.




- Following figure J1, disconnect the tube (#5,#6) from the connector (#12,#8,#9)



Diagram J1

Ribbon inside
end panel

door panel

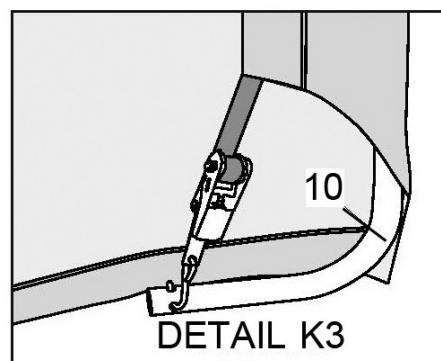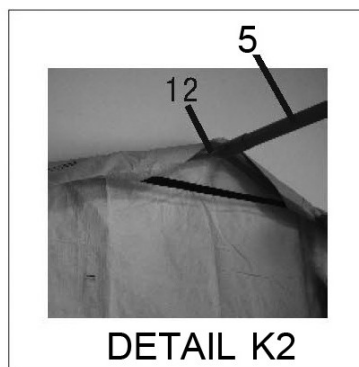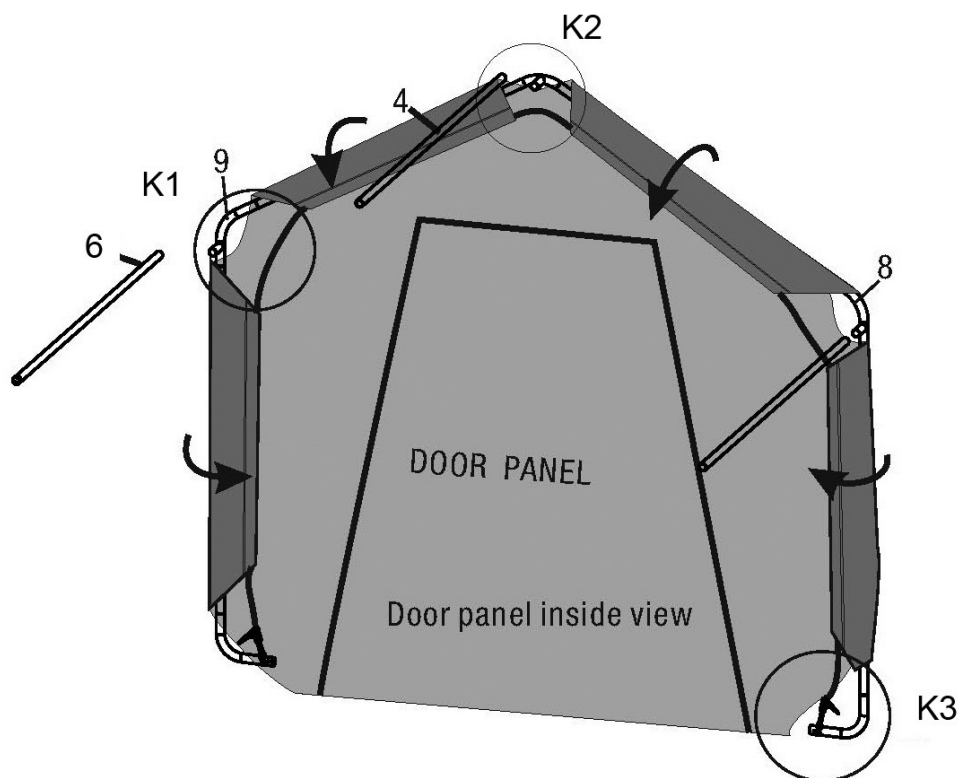

- Slip the webbing strap between the tube #6 and the connector as shown and reconnect the tubes.
- Repeat this for the opposite shoulder.

6. Move to the apex of the garage using a step ladder and using a rubber mallet, disconnect the apex tube (#6) from the connector (#12). Slip the webbing strap between the tubes (see Diagram K2) and reconnect.
7. While one person remains on the steps and standing at the apex of the garage, the other person inserts the hook of the ratchet straps into both sides of the corner legs at (K3).
8. The person standing at the apex assists by ensuring the cover is partially folded over the tubes of the end frame and inside or toward the interior of the garage.
9. The other person makes sure the door panel is flat and then tightens the ratchet straps as in Diagram K3 until the door panel is in tension.
10. Repeat the above steps for the other side of the back panel.
11. Do not overtighten the ratchets at this time.

STEP 6: INSTALLING THE MAIN COVER

1. Lay the cover on the ground next to the frame with the inside of the cover (the side with the pockets) facing down and the strap on the front and rear of the frame.
2. Tie a rope to the eyelets on the cover, one each side. Another rope in the middle helps if another person is available.
3. Pull the cover over the frame using the rope making sure to centre the cover on the frame. There should be an equal overhang on each corner.
4. Assemble the ratchet tie-down (#29) to the strap ends on the four corners of the cover. Ratchet a few times to draw the strap onto the spool.
5. Insert the hook on the ratchet into the hole on the bent corner leg. Wind the ratchet so that the webbing overlaps itself.
6. Slide the bottom cross rails through the fabric pockets at each leg and re-attach with clamps at each leg. Repeat this on the other side. Push down on the cover rails to tighten the cover before tightening all bolts fully.




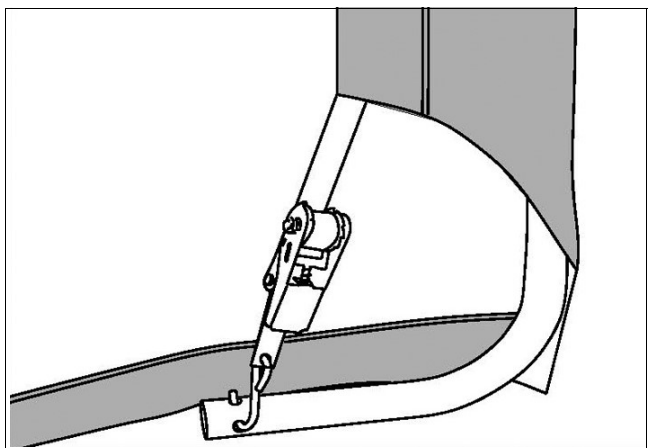




Diagram L

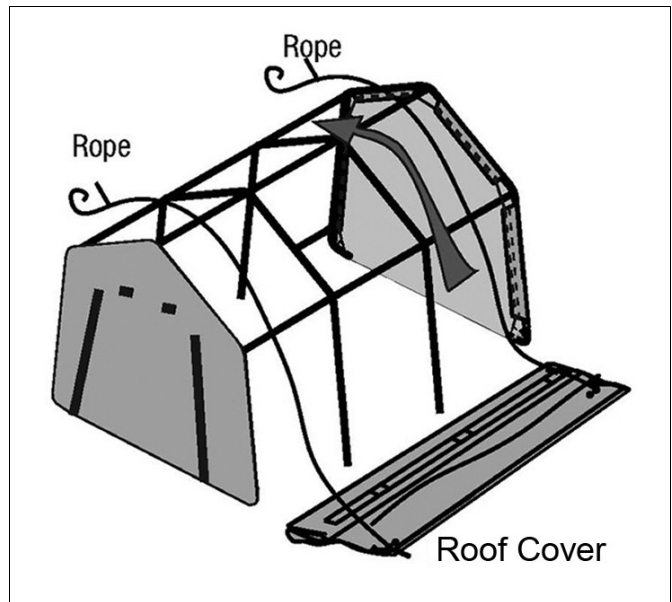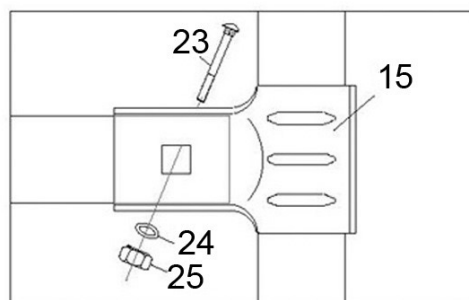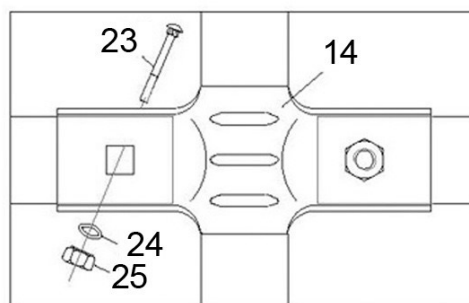

7. When the cover rails are all secured, proceed to the four corners and tighten the end covers to the end frames using the ratchet action.

NOTE: Over-tightening can cause damage to straps and/or the anchor point. Do not over-tighten!

NOTE: Check periodically (2 or 3 times in the first week) and tighten the ratchet tie downs and all hardware as needed. Monthly inspection is recommended throughout use..

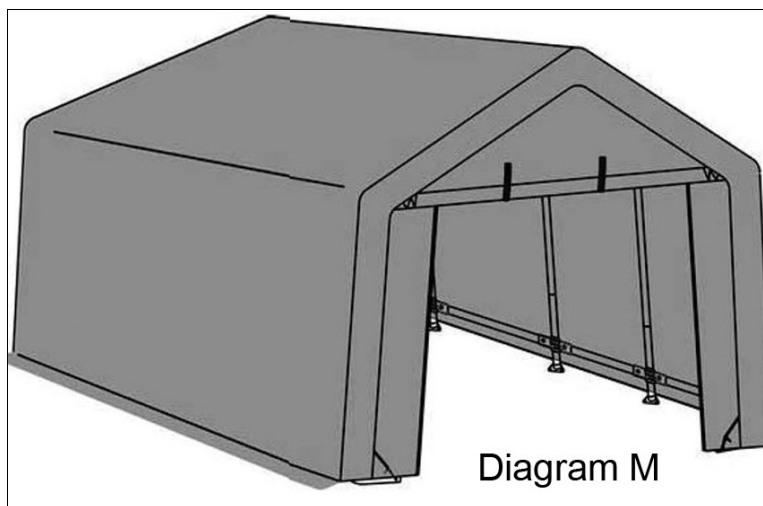


Diagram M



WARNING: IF POSITIONING THE GARAGE IN A WINDY LOCATION ALWAYS ENSURE THE FRONT DOOR IS KEPT FULLY CLOSED TO PREVENT WIND LIFTING THE GARAGE FROM INSIDE.

DISASSEMBLY

When disassembling the garage, depress the spring-loaded bar to disengage the ratchet and open the ratchet handle completely to allow the webbing strap to pull through.

To dismantle, execute all instructions in reverse order.



Store your garage in a cool, dry location between seasons to prolong the usable life of all components. Components are not equally durable and will require replacement over time at differing intervals.

ADDITIONAL ANCHORING

Please note that when the instant garage is to be sited on soft ground an additional, or alternative method of anchoring may be required.

This can take the form of an additional Auger Securing Set (already supplied without rope with CLARKE instant garages), which can add greater security for exposed, windy locations.

Alternatively, the Easy Hook Anchoring System GHA2, can be used to provide greater security on soft ground, available from your CLARKE dealer.

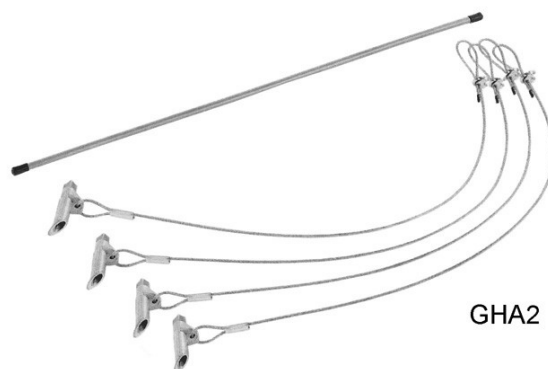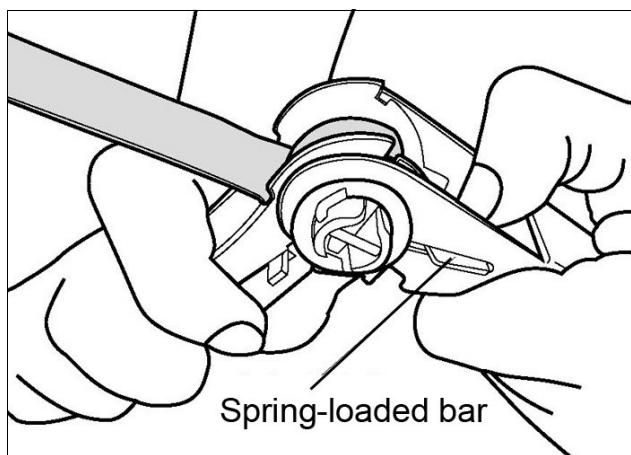

WARNING: SERIOUS INJURY TO PERSONS OR PROPERTY COULD RESULT IF THE GARAGE IS NOT SECURELY ANCHORED.

REPLACEMENT COVERS

Top Cover		ZJTCIG8121226
Front Cover		ZJTCIG8121227
Back Cover		ZJTCIG8121228

These are available from your dealer.

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS



AIR COMPRESSORS
From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS
Prime duty or emergency standby for business, home and leisure.

POWER WASHERS
Hot and cold, electric and engine driven - we have what you need

WELDERS
Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING
Drills, grinders and saws for DIY and professional use.

WOODWORKING
Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS
Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS
Submersible, electric and engine driven for DIY, agriculture and industry.

POWERTOOLS
Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS
All sizes for car and commercial use.



PARTS & SERVICE:

0208 988 7400

Parts Enquiries
Parts@clarkeinternational.com

Servicing & Technical Enquiries
Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke® INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com