

CLAMPBEE®



MITRE SAW STAND WITH ROLLERS

MODEL NO: CMSSR

PART NO: 6500975

ASSEMBLY INSTRUCTIONS

ORIGINAL INSTRUCTIONS

LS0718 - ISS 2

INTRODUCTION

Thank you for selecting this Clarke mitre saw stand with rollers.

Read this manual before use, the warnings and cautions in this manual will help you use the mitre saw stand safely.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

SAFETY PRECAUTIONS




1. This mitre saw stand has a **maximum load capacity of 150 kg** which must not be exceeded.
2. Do not stand on top of the mitre saw stand.
3. Take care when placing a load on to the mitre saw stand, it should be placed gently so that the strain is taken up gradually. Do not drop a load carelessly.
4. Always check the mitre saw stand for damage before use.
5. Always ensure you are working on a firm flat stable surface.

SPECIFICATIONS

Maximum Dimensions	1710 (fully extended) x 460 x 595-820 mm
Maximum Load	150 kg


ASSEMBLY

1. Screw the handle onto the table using the screws provided.
2. Slide in the extension arms and secure from below using the knob supplied.
3. Insert the rollers into the extension arms and secure in place using the knob supplied.

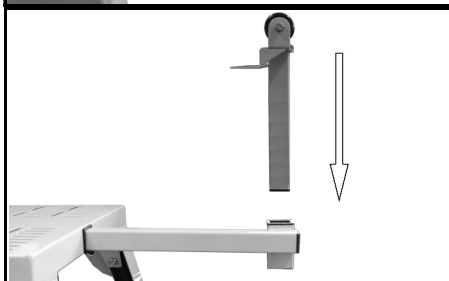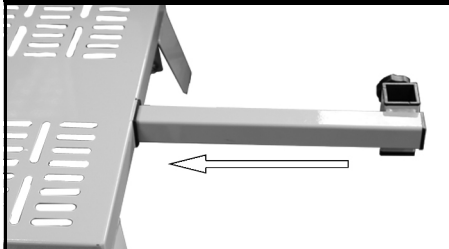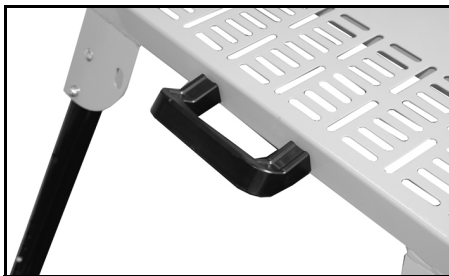

OPENING/CLOSING THE MITRE SAW STAND


1. Push the locking pin in as you swing the leg into position.
2. The leg should lock into place.
3. Test the stability of the table before use.

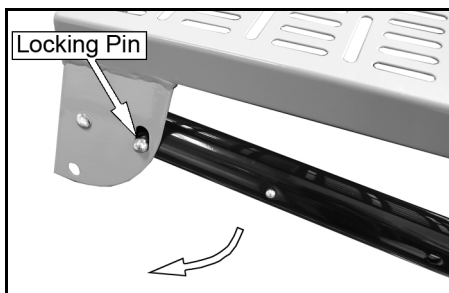

ADJUSTING THE MITRE SAW STAND


ADJUSTING THE LEG HEIGHT

1. Press the locking pin shown and pull the leg to the desired height.
 - The locking pin must lock into one of the holes on the leg.
 - Make sure that the same hole is used on each leg.
2. Repeat steps 1 to 3 with the remaining legs.
3. Test the stability of the table before use.

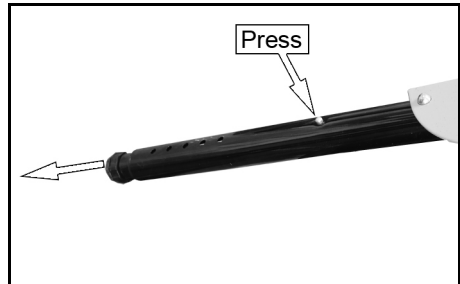


ADJUSTING THE ROLLER LENGTH

1. Loosen the knob shown.
2. Slide the extension arm to the required position.
3. Tighten the knob to lock in place.

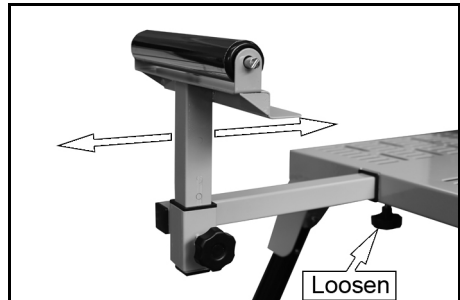

ADJUSTING THE ROLLER HEIGHT

1. Loosen the knob shown.
2. Adjust the roller to the required height.
3. Tighten the knob to lock in place.

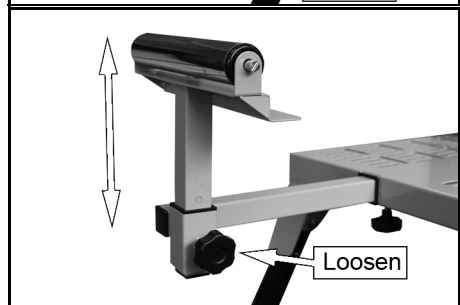

ATTACHING THE MITRE SAW

1. Place the mitre saw in the middle of the table and secure to the table using the fixings supplied.