

Gladiator®



STOVE FANS

MODEL NO: CSF2, CSF4 & CSF5

PART NO: 6912200, 6912215 & 6912220

USER INSTRUCTIONS



ORIGINAL INSTRUCTIONS

GC1118 - ISS 1


INTRODUCTION

Thank you for purchasing this CLARKE product.

Before attempting to use this product, please read this manual thoroughly and follow the instructions carefully. In doing so you will ensure the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

DESIGN FEATURES

1. Handle
 2. Cooling Fins
 3. Thermo-electric Module
 4. Base
 5. Heat sensitive metal strip.
- This is a safety device to protect the motor from overheating if the surface temperature exceeds 250°C (482°F).

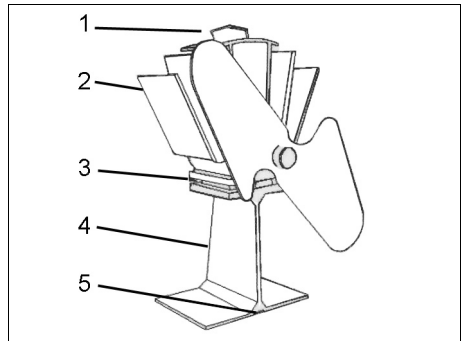


POSITIONING AND USE



WARNING: THE OPTIMUM OPERATING TEMPERATURE IS 80-250°C (176-482°F). NEVER USE AT OVER 350°C (662°F)

1. Do not position the fan close to the flue.
 2. Do not use over 350°C.
- The optimum operating temperatures stated are for reference and guidance only. They may vary in different environments as fans have been tested in controlled laboratory conditions.

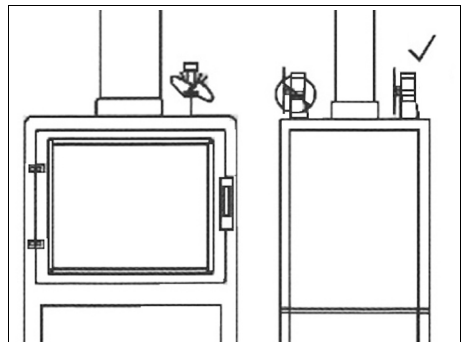

3. We recommend the use of a suitable thermometer to monitor the temperature and avoid damage to the components due to overheating.
 4. Never place the fan on an unprotected surface if the fan base is still hot.
 5. Do not move the fan when in use unless in an emergency. In this case remember to wear gloves to protect against burns or injury from the rotating blades.
 6. Keep loose items such as loose fabrics away from the fan when in use.
 7. Ensure that children and pets are supervised around the stove and the stove fan.
- The fan will start working when the sensor reaches 50°C. Thereafter, the fan will spin faster as the temperature increases and will slow down as it decreases. Once all the fuel has burnt the fan base will cool down along with the stove.

ENVIRONMENTAL PROTECTION

Do not dispose of this product with general household waste at the end of its life. This product contains valuable raw materials and should be disposed of appropriately at a recognized disposal facility.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission. This guarantee does not effect your statutory rights.

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

POWERTOOLS

Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS

All sizes for car and commercial use.



PARTS & SERVICE: 0208 988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke® INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com