

Clarke®



ADJUSTABLE TRESTLE

MODEL NO: CTA150

PART NO: 660018

ASSEMBLY INSTRUCTIONS

ORIGINAL INSTRUCTIONS

LS0518 - ISS 2

INTRODUCTION

Thank you for selecting this Clarke Adjustable Trestle.

Read this manual before use. The safety precautions in this manual will help you use the trestle safely.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.


SAFETY PRECAUTIONS

1. This trestle has a capacity of 150 kg which must not be exceeded.
2. Do not stand on the cross members or use as a step ladder, as this could cause severe damage. Do not stand on top of the trestle.
3. Take care when placing a load on the trestle, it should be placed gently so that the strain is taken up gradually.
4. Do not mount power tools on the trestle.
5. Always check the trestle for damage before use.
6. Always ensure you are working on a firm, flat, stable surface.

SPECIFICATIONS

Dimensions L x W x H	685 x 590 x 815-1310 mm
Maximum Load	150 kg

WHAT IS SUPPLIED

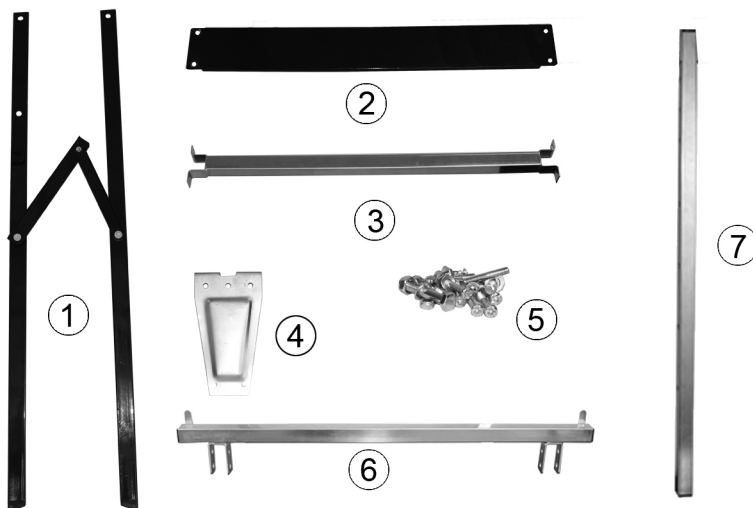


Number	Description	Qty	Part number
1	Legs (pair)	2	
2	Lower Cross Brace	2	
3	Upper Cross Brace	1	
4	Pivot Plate	2	
5	Fixings Pack	1	
6	Support Bar	1	
7	Support Frame Upright	2	

ASSEMBLY



MAIN FRAME

1. Join both sets of legs together with the upper cross brace.
2. Secure the upper cross brace.
 - The small machine screw, washer, spring washer and nut must be installed towards the front of the stand.
 - The lug, washer, spring washer and nut must be installed toward the rear, on the same side as the locking latch.
3. Fit the lower cross braces to the front and rear as shown using the nuts/bolts and washers provided.

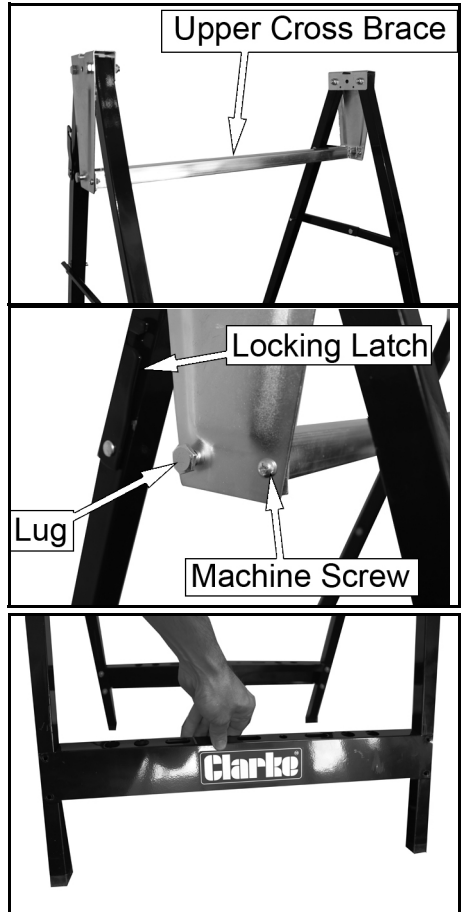

SUPPORT FRAME


1. Fit the 2 support frame uprights to the support bar as shown.
2. Join them together using 1 bolt, 2 washers and a nut in each hole (4 holes in total).
3. Slide the support frame into the main frame as shown.

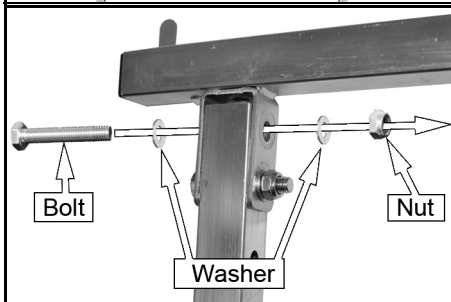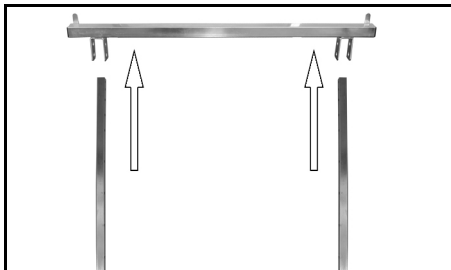

OPENING/CLOSING THE WORKBENCH



OPENING

1. Spread the front and rear legs.
2. Press down on the lower locking bar (1) as shown.
3. Slide the locking latch over the lug (2).
4. Test the stability of the stand by rocking it before use.

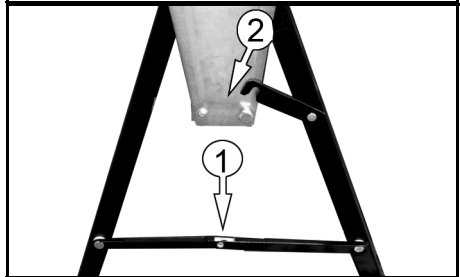

SETTING THE SUPPORT HEIGHT

1. Raise the support bar to the required height.
2. Insert the locking pin as shown on both sides.

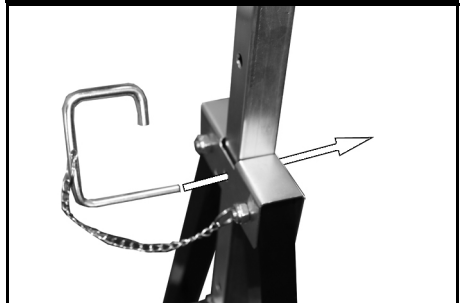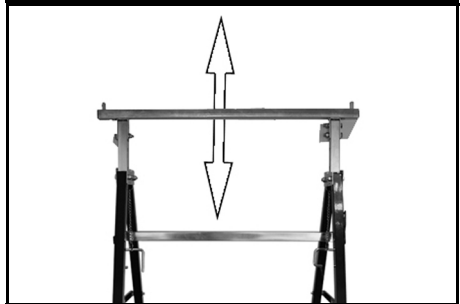

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

POWERTOOLS

Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS

All sizes for car and commercial use.



PARTS & SERVICE: 0208 988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke® INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com