

Clarke®



RIGHT ANGLE DRILL ATTACHMENT

Model No: RAD1

Part No: 6500232

USER INSTRUCTIONS



Please Note that details and specifications herein, are correct of time of going to print.
However CLARKE International reserve the right to change specifications at any time without prior notice.

Copyright CLARKE International All rights Reserved 2006.

0407

Thank you for purchasing this CLARKE Right Angle Drill Attachment.

Please read this instruction leaflet thoroughly and follow the instructions carefully, in doing so you will ensure the safety of yourself and that of others around you, this will also ensure that the Right Angle Drill Attachment will give you long and satisfactory service.

Please keep these instructions in a safe place for future reference.

CLARKE GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

TECHNICAL SPECIFICATION

Chuck capacity	1mm - 10mm
Drive Spindle Width	9mm

SETUP, SAFETY PRECAUTIONS & GENERAL USE

- Insert and secure a drill bit into the chuck, attach a drill/drive to the drill attachment drive spindle.
- **NEVER** use with a drill in 'hammer' mode.
- Beware of wearing loose clothing, ensure cuffs are secured.
- Take great care to avoid any part of your hands or wrists or any part of your clothing from coming into contact with the chuck of the drill which drives this device.
- Inject a few drops of oil into the lubrication point on the upper body, at regular intervals, depending upon usage, and particularly after a period of non-use..

PARTS LIST

Chuck	SURAD1001
Chuck Securing Screw	SURAD1002
Chuck Key	SURAD1003
Chuck Removal Spanner	SURAD1004



For spare parts and servicing, please contact your nearest dealer, or CLARKE International on:

020 8988 7400

or email:

Parts@clarkeinternational.com

Service@clarkeinternational.com

CLARKE International, Hemnall Street, Epping, Essex, CM16 4LG