

MECHANICS MOBILE SEAT MODEL NO: CMS3

PART NO: 7630228

USER INSTRUCTIONS

GC0424

INTRODUCTION

Thank you for purchasing this CLARKE Mechanics Mobile Seat.

Before attempting to use the product, it is essential that you read this manual thoroughly and carefully follow all instructions given. In doing so you will ensure the safety of yourself and that of others around you and you can also look forward to the product giving you long and satisfactory service.

GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for its intended purpose.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission. This guarantee does not effect your statutory rights.


SAFETY PRECAUTIONS

- 1. Use your mobile seat for any task where you would normally sit or kneel, ensuring the floor surface is hard enough that the castors do not sink in.
- 2. DO NOT leave the mobile seat where it may be accidentally trodden on.
- 3. Have any damaged parts repaired or replaced immediately. Use genuine Clarke parts only. The use of unauthorised parts may be dangerous and will invalidate the guarantee.
- 4. **NEVER** climb on, stand on, or attempt to ride on the mobile seat or use it to transport heavy objects.

UNPACKING & ASSEMBLY

Unpack and lay out all components, checking for any damage which may have occurred during transit, and ensuring that all parts are accounted for by checking against the parts list. Should there be any deficiency or damage, please contact your Clarke dealer immediately.

- 1. Using the hand tools supplied, assemble as follows.
- 2. Mount the side supports (2) to the base assembly with the 14mm bolts (11), small washers (10), spring washers (5) and domed nuts (4), tightening securely.
- Attach the seat cushion (1) to the side supports, using the x-headed machine screws (3).

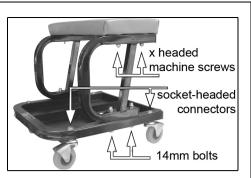

4. Fix the castors to the frame using the large washers (7)& retaining inserts (6).

Check that all fixings, including those securing the castors and base frame are tight and secure before using this seat. Your mobile seat is now ready for use.

COMPONENT PARTS OF THE SEAT

No	Description	<u>ا</u>	\sim
1	Seat Cushion		-1
2	2 Side Support		+ 1
3	3 Machine Screw		
4	1 Domed Nut		A Min
5	Spring Washer		
6	Castor Retaining Insert		3→₩
7	Washer (large)		
8	Base Frame		5
9	0 Washer (small)		
10			
11			
12 Plastic Bas		e Tray	7
FEATURE		RATING	9-
Max Capacity		113 kg	
Net Weight		4.35 kg	
Dimensions		355 x 375 x 380 mm	

Parts & Service: 020 8988 7400 / E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com



Parts Enquiries Parts@clarkeinternational.com

Servicing & Technical Enquiries Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

CLOPEC INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG www.clarkeinternational.com