

Clarke®



3KVA DUAL VOLTAGE GENERATOR

MODEL NO: PG3800ADV

PART NO: 8857854

OPERATION & MAINTENANCE INSTRUCTIONS



DL0523 Rev 2

INTRODUCTION

Thank you for purchasing this CLARKE 3KVA Dual Voltage Generator.

Before attempting to use this product, please read this manual thoroughly and follow the instructions carefully. In doing so you will ensure the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

ENVIRONMENTAL RECYCLING POLICY



Through purchase of this product, the customer is taking on the obligation to deal with the WEEE in accordance with the WEEE regulations in relation to the treatment, recycling & recovery and environmentally sound disposal of the WEEE.

In effect, this means that this product must not be disposed of with general household waste. It must be disposed of according to the laws governing Waste Electrical and Electronic Equipment (WEEE) at a recognised disposal facility.

GENERAL SAFETY RULES



WARNING: EXHAUST FUMES CAN BE EXTREMELY DANGEROUS IF INHALED

WORK AREA

- *Always use in a well ventilated area.*
- *Always position the exhaust outlet away from people.*
- *Never use indoors or in a confined space.*
- **Read these safety instructions before using the equipment.**
- **Keep children away from the generator.**

POSITIONING THE GENERATOR

1. **Always** leave a least a 1m gap between the generator and any surrounding building or structures.
2. **Always** ensure the generator is on a solid, flat surface.
3. **Always** ensure the surrounding area is free from any material that could burn or be damaged by heat.
4. **Never** move or tilt the generator whilst it is switched on.

FIRE PREVENTION

1. **Always** switch the engine OFF when refuelling.
2. **Always** refuel away from any source of heat.
3. **Always** refuel in a well ventilated area.
4. Only use standard unleaded petrol.
5. **Never** overfill the tank, fill to the level specified (See "Checking the fuel level" on page 11.).
6. **Never** smoke whilst refuelling and avoid smoking or using a naked flame near the generator.
7. **Never** start the engine if there is spilled fuel. Any spillage must be wiped clean and the generator allowed to dry before attempting to start the engine.







PREVENTION OF ELECTRIC SHOCK

1. **Never** use the generator in wet conditions unless it is well protected/ covered. Under these conditions, adequate ventilation **MUST** be provided.
2. **Never** operate the generator with wet hands.
3. **Never** use water or any other liquids to clean the generator.


ADDITIONAL SAFETY RULES FOR GENERATORS

1. **Always** ensure the applied load does not exceed the generator rating. Overloading the generator is dangerous and could cause serious damage.
2. **Always** disconnect the generator when carrying out any maintenance.
3. **Always** ensure the generator reaches operating speed before connecting a load.
4. **Never** allow the generator to run out of fuel when a load is connected.
5. **Never** transport the generator with fuel in the tank.
6. **Do Not** connect to a commercial or residential power supply; e.g. ring main.
7. **Never** allow the generator air vents to become blocked.

SAFETY SYMBOLS

	Read Instruction manual before use		Flammable
	Caution - The user should be aware of a general hazard		Hot Surface - Do not touch
	Dangerous voltage		Poisonous fumes - Do not use the generator in an enclosed space.

GENERATOR OVERVIEW

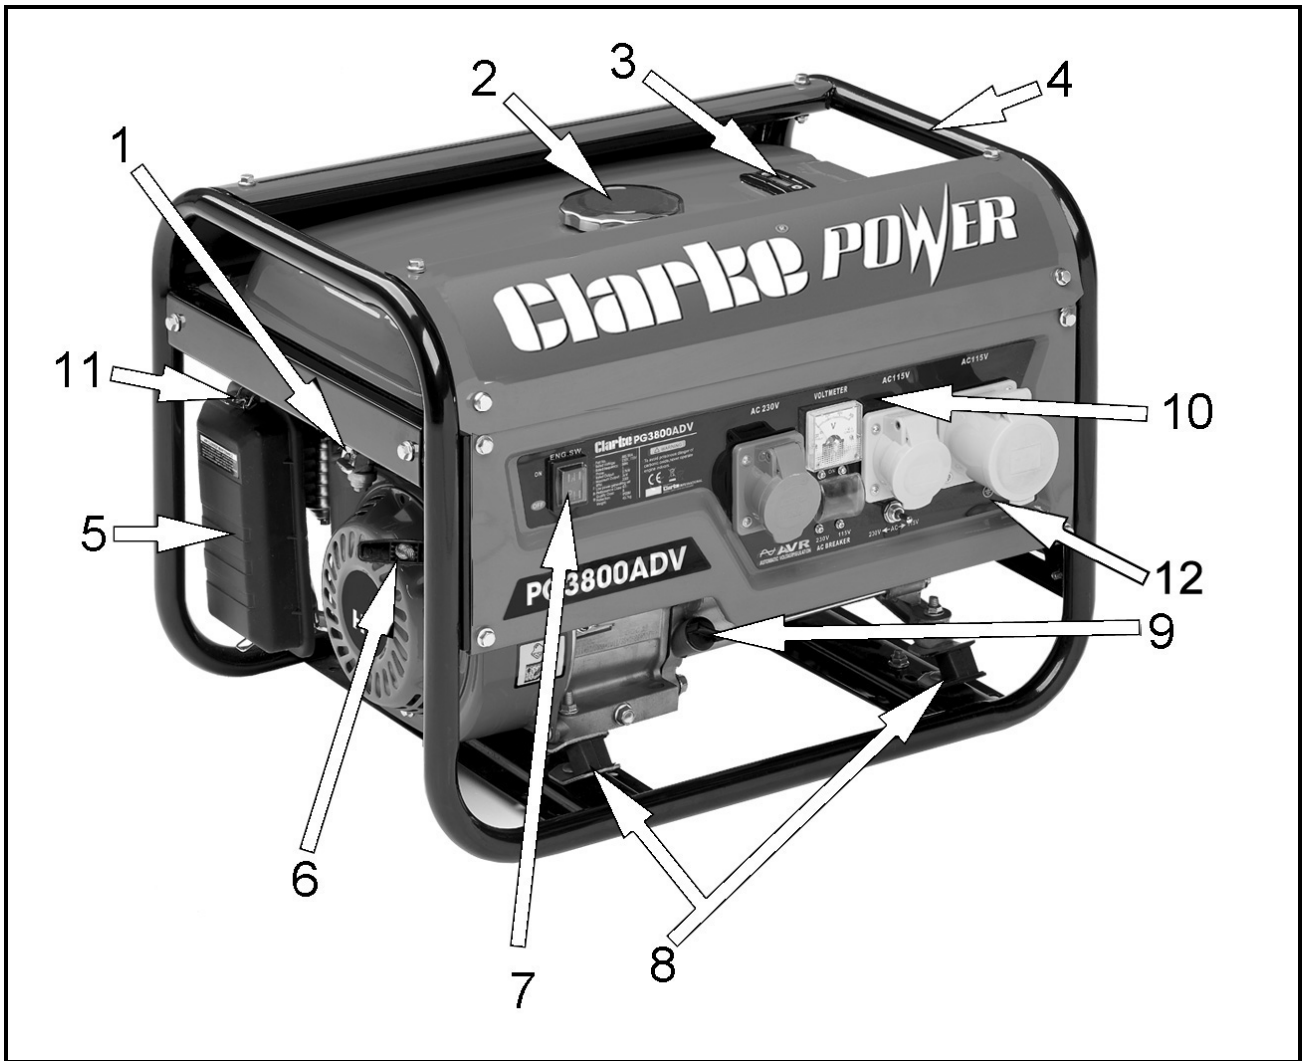

NO	DESCRIPTION	NO	DESCRIPTION
1	Fuel Supply Valve	7	Engine Switch
2	Fuel Tank Cap	8	Anti-vibration Mounts
3	Fuel Level Gauge	9	Oil Dipstick
4	Frame	10	Control Panel
5	Air Filter	11	Choke Lever
6	Starting Handle (recoil/pull start)	12	Earth Point

UNPACKING AND ASSEMBLY

Unpack your generator and check to ensure the following items are present. Should there be any deficiency or damage caused during transit contact your CLARKE dealer immediately.

<ul style="list-style-type: none">• The Generator	<ul style="list-style-type: none">• Spark plug box spanner
<ul style="list-style-type: none">• Tommy bar	

BEFORE USING THE GENERATOR

Attach a suitable earth lead to a good earthing point - water pipe, ground spike etc., whenever you use this generator.

Before using your generator check that:

- The generator is in good condition and free from any damage.
- The generator is clean and free from fuel or oil spillage.
- The generator is correctly located for use (See page 3).
- The fuel system is intact and there is no leakage.

NOTE: Always use a funnel to fill the fuel tank to avoid accidental spillage of fuel. If fuel is spilled it must be cleaned up before use..



WARNING: ENSURE THERE IS ADEQUATE FUEL IN THE TANK WHEN USING THE GENERATOR. RUNNING OUT OF FUEL OR STOPPING THE ENGINE SUDDENLY WITH A LOAD CONNECTED COULD CAUSE SERIOUS DAMAGE.



WARNING: ALWAYS CHECK THE OIL LEVEL BEFORE STARTING SEE PAGE 8, FAILURE TO MAINTAIN THE CORRECT OIL LEVEL MAY SERIOUSLY DAMAGE THE ENGINE.


EARTH POINT



WARNING: FAILURE TO PROPERLY GROUND THE GENERATOR CAN RESULT IN ELECTROCUTION

1. Ground the generator by connecting a suitable grounding wire to the earth point.

NOTE: Connect the other end of the grounding wire to a copper or brass grounding rod that is driven into the earth.

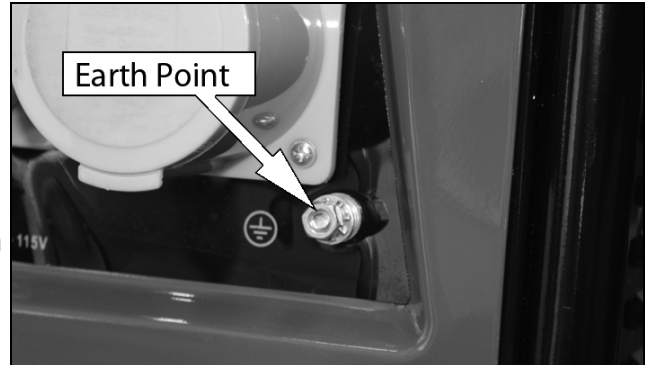



CHECKING THE ENGINE OIL LEVEL



WARNING: TO CARRY OUT THIS CHECK, PLACE THE GENERATOR ON LEVEL GROUND WITH THE ENGINE SWITCHED OFF.

WARNING: TAKE CARE NOT TO TOUCH ANY HOT PARTS OF THE GENERATOR WHEN CHECKING THE OIL LEVEL.

1. Turn the dipstick anti-clockwise and remove from the oil fill tube.
2. Wipe the dipstick with a clean cloth.
3. Insert the dipstick back into the oil fill tube and then remove it again. Do not screw in the oil filler cap/ dipstick when doing this.
4. If the oil level is at or below the 'L' mark on the dipstick, add oil to the crankcase.
 - Fill until the oil reaches the threads in the oil fill tube.
 - Oil capacity (See page 19).
 - We recommend the use of SAE15W40 oil in this generator. available from your CLARKE dealer.
5. Replace the oil filler cap.

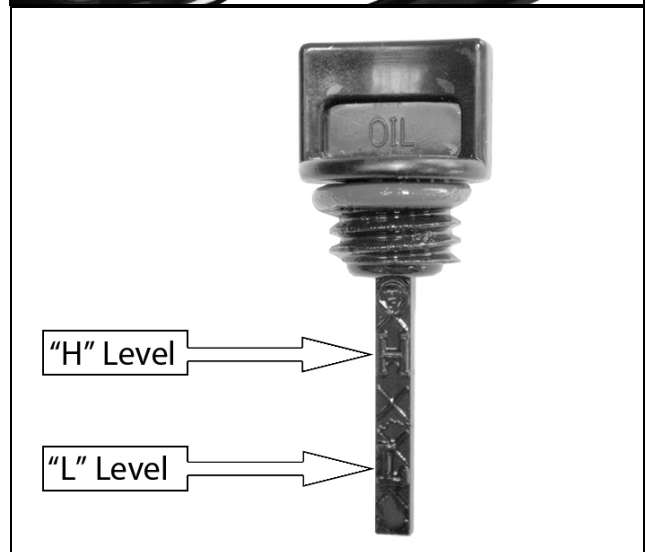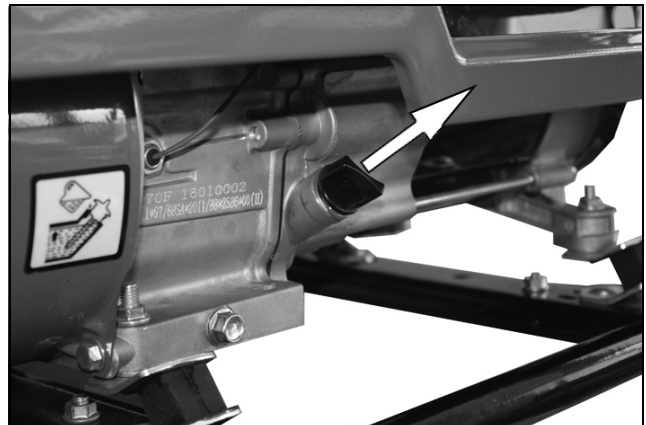

CHECKING THE FUEL LEVEL

RECOMMENDED FUEL


Only use standard unleaded petrol.

1. Check the fuel level on the fuel gauge.


The fuel gauge will show as red when you have fuel in the tank turning white as the fuel level decreases.



2. To add fuel, open the fuel filler cap.

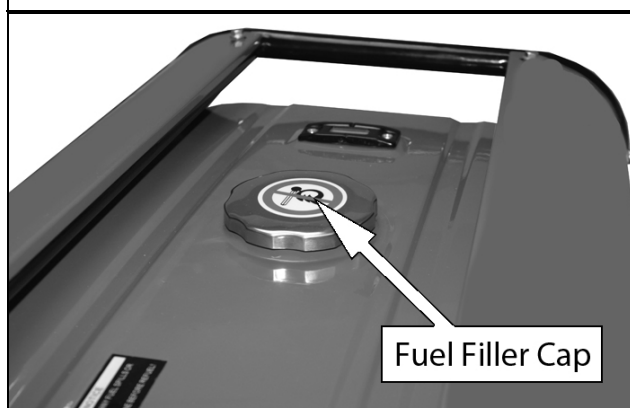

3. Just inside the fuel tank is a fuel filter which catches any contaminants as you refuel.
4. Slowly add fuel to the fuel tank (maximum 15L) watching the fuel level gauge as you do so.

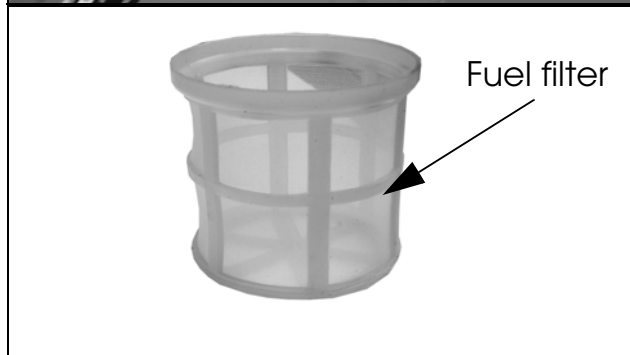

WARNING: ALWAYS REFUEL IN A WELL VENTILATED AREA AWAY FROM ANY HEAT SOURCES.

WARNING: ALLOW THE UNIT TO COOL DOWN BEFORE REFUELLING.

WARNING: DO NOT LEAVE FUEL WITHIN THE REACH OF CHILDREN.




NOTE: Do not overfill the fuel tank.

5. Replace the fuel filler cap securely.

USING YOUR GENERATOR


STARTING THE ENGINE

1. Remove all connections from the AC sockets.
2. Set the fuel valve to the ON position as shown.
3. Move the choke lever to the 'Choke' position.
4. Set the engine switch to 'ON'.

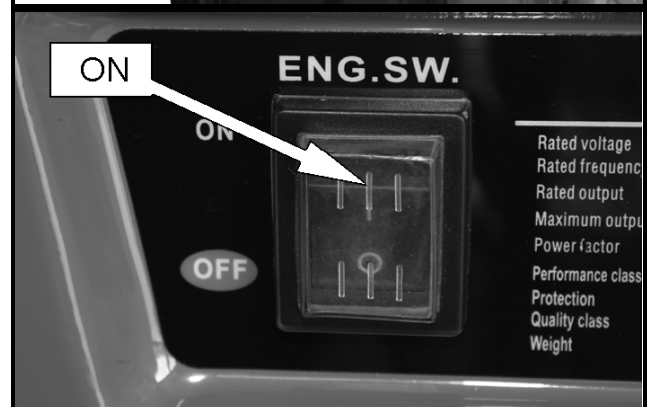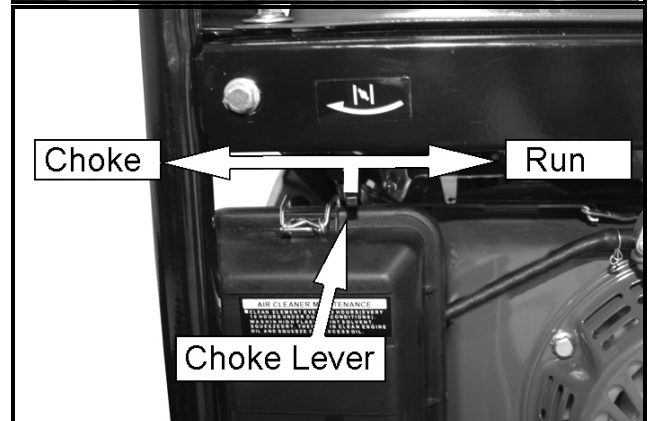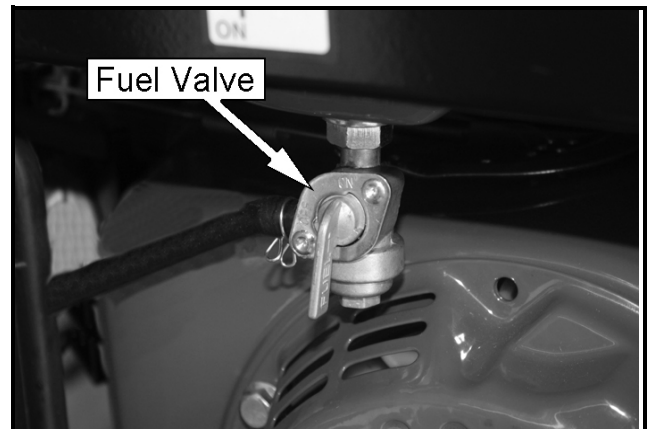


5. Hold the generator steady and pull the starting handle lightly until you start to feel resistance. Then pull sharply to start the engine.

NOTE: You may have to do this more than once.

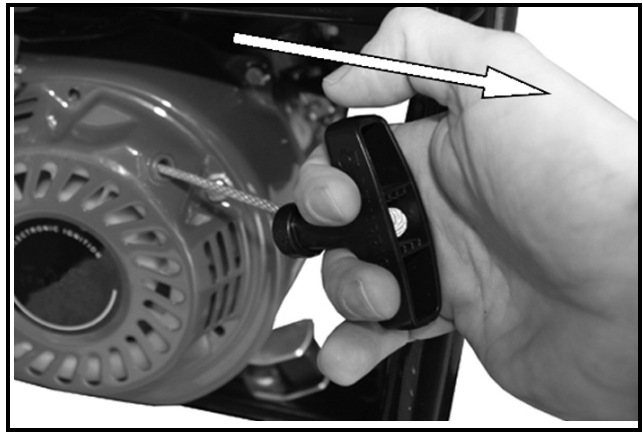

WARNING: ONCE THE GENERATOR HAS STARTED, RELEASE THE STARTING HANDLE SLOWLY TO AVOID INJURY/DAMAGE AS IT RECOILS.

6. Once the engine has warmed up, move the choke lever to the "run" position.
 - The generator is now ready to use.

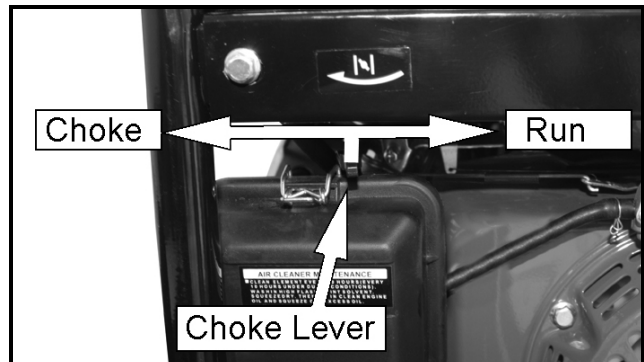


CONNECTING ELECTRICAL DEVICES

The generator can supply both 230V AC and 115V AC.

The sockets are laid out in the following order: (from left to right):

1 x 16amp 230v (Blue), 1 x 16amp 115v (Small Yellow) and 1 x 32amp 115v (Large Yellow).


1. Connect the appliance to the generator starting with the device that draws the most current.
2. Select the voltage that you require using the voltage selector switch.

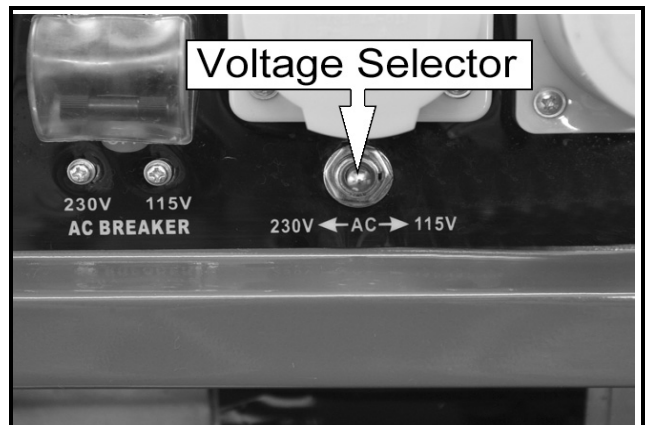

AC BREAKER

The AC Breaker will activate if the generator is overloaded. If the AC Breaker activates,

1. Remove any connected devices from the generator.
2. Wait for a few minutes.
3. Set the AC breaker to the ON (up) position.
4. Reconnect the devices to the generator, making sure you do not exceed the maximum capacity of the generator.

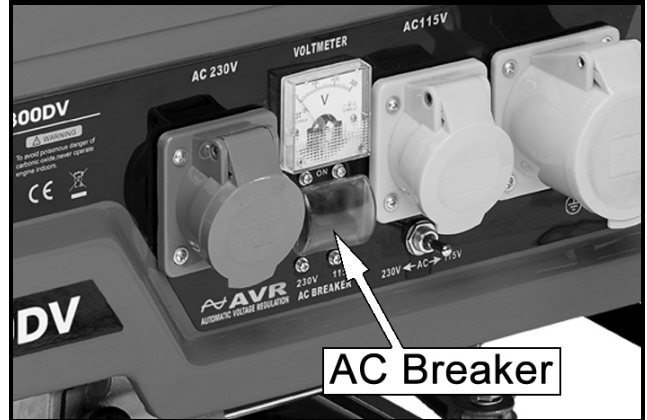

CAUTION: MAKE SURE THAT THE APPLIANCE BEING CONNECTED IS IN GOOD WORKING ORDER, IF IT BEGINS TO ACT ABNORMALLY OR STOPS SUDDENLY, DISCONNECT IT FROM THE GENERATOR




CAUTION: MAKE SURE THE APPLIANCE DOES NOT EXCEED THE MAXIMUM RATED LOAD FOR THE GENERATOR.

CAUTION: ANY DEVICE WHICH CONTAINS AN INDUCTIVE LOAD E.G. DEVICES THAT CONTAIN A MOTOR MAY REQUIRE MORE CURRENT ON STARTUP.

SHUTTING DOWN THE GENERATOR

To stop the generator in an emergency simply set the engine switch to 'OFF'.

1. Turn off and disconnect any electric devices.
2. Make sure that the AC breaker is set to the off (down) position.
3. Set the engine switch to the "0" (OFF) position.
4. Turn the fuel valve knob to "OFF".

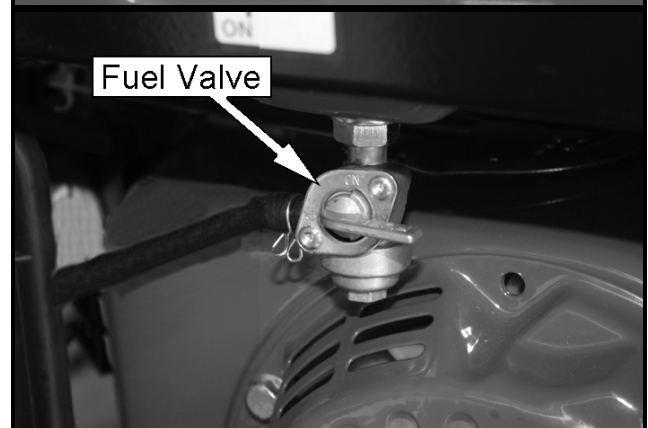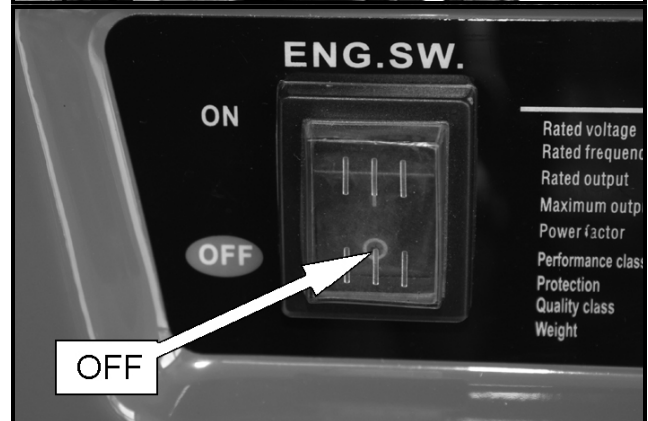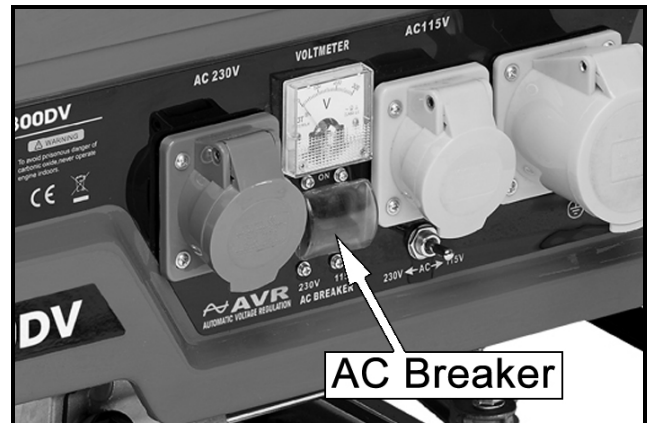

MAINTENANCE

CHANGING THE ENGINE OIL




CAUTION: PROLONGED EXPOSURE TO USED ENGINE OIL IS DANGEROUS, ALWAYS WASH YOUR HANDS THOROUGHLY AFTER HANDLING USED ENGINE OIL.

1. Unscrew and remove the oil filler cap/dipstick.

2. Place an oil collection tray under the drain plug.
3. Unscrew the drain plug and allow the used engine oil to drain from the crankcase into the oil collection tray.

NOTE: Drain the engine oil when the engine is warm, this will ensure the oil flows out faster.

4. Replace the drain plug.
5. Fill the crankcase with engine oil.
 - Fill until the oil reaches the threads in the oil fill tube.
 - Oil capacity (See page 19).
 - We recommend the use of SAE15W40 oil in this generator, available from your CLARKE dealer.
6. Replace the oil filler cap/dipstick.

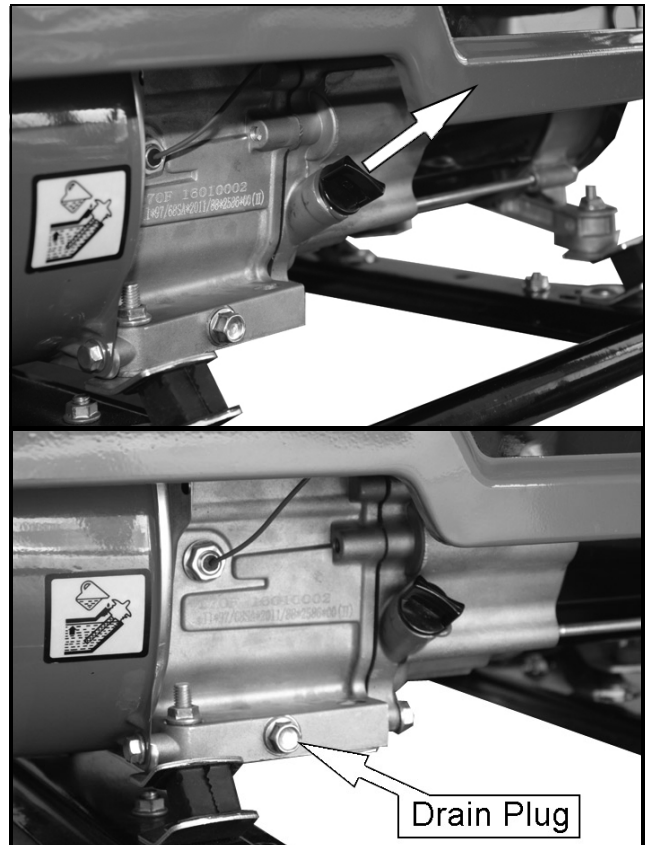

ENVIRONMENTAL PROTECTION


One of the most damaging sources of pollution is oil, Do not throw away used engine oil in with your domestic rubbish or pour it down drains and sinks. Place it in a leak proof container and take it to your local waste disposal site.

CHANGING THE SPARK PLUG



CAUTION: ALLOW THE ENGINE TO COOL BEFORE REMOVING THE SPARK PLUG.


1. Remove the spark plug cap from the spark plug.

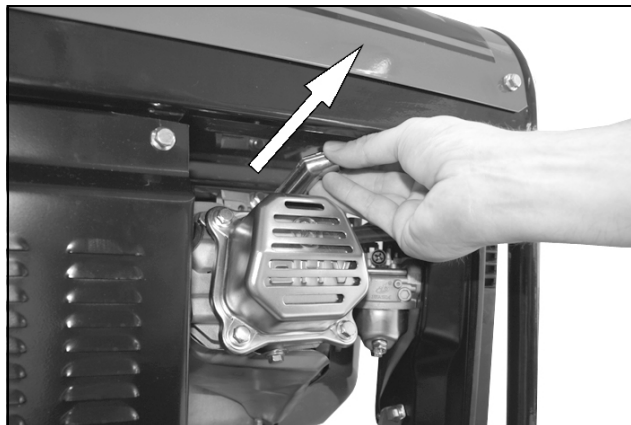

2. Use the spark plug spanner supplied to remove the spark plug.
3. Remove any carbon that has accumulated around the electrode.



4. Check the spark plug gap (a), it should be between 0.7 and 0.8 mm, adjust if necessary.
5. Check the overall condition of the spark plug for erosion or pitting and replace if necessary.
6. Reinstall the spark plug and replace the spark plug cap.

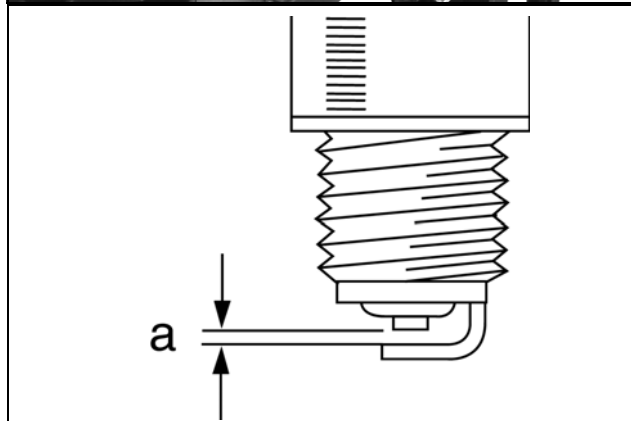


CHECKING THE AIR FILTER



CAUTION: DO NOT USE THE GENERATOR WITHOUT THE AIR FILTER FITTED, THIS CAN DAMAGE THE GENERATOR.

1. Unclip and remove the air filter cover.

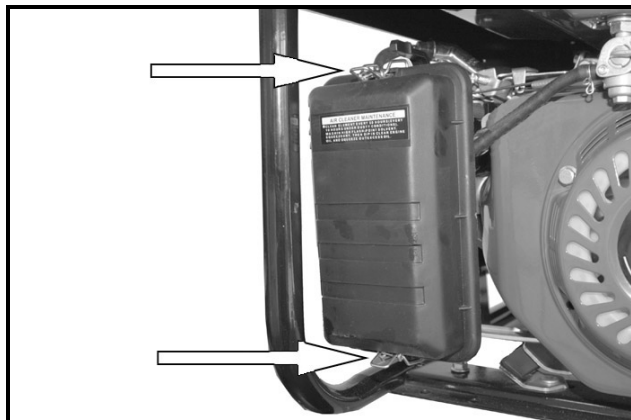


2. Remove the air filter element.

3. Make sure that the air filter is clean and not damaged.

- If the air filter is damaged contact CLARKE spare parts department for a replacement.

- If the filter is dirty, wash in a solution of warm water and mild detergent and rinse thoroughly. Leave the filter to dry completely, once it is dry immerse in clean engine oil and squeeze to remove excess oil.

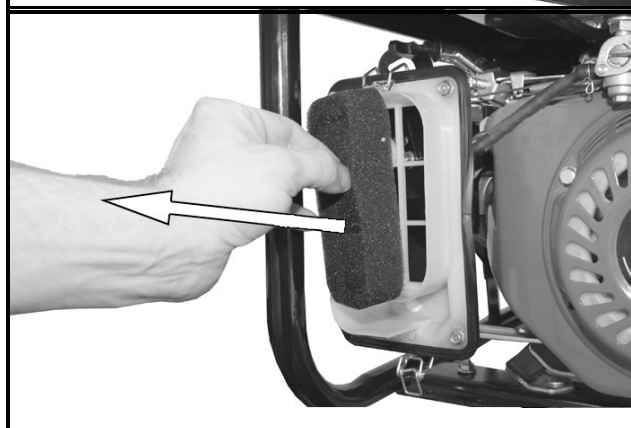

WARNING: DO NOT USE INFLAMMABLE SOLVENTS OR PETROL TO CLEAN THE AIR FILTER.

4. Replace the filter to its original position and replace the air filter cover.

CLEANING THE FUEL VALVE FILTER / DRAINING THE FUEL TANK

1. Set the fuel supply valve to OFF.



2. Unscrew and remove the cup, then remove the valve filter and 'O' ring.

3. Wash these parts in a non-flammable solvent. Make sure that the valve filter is not damaged.

4. Place an approved petrol storage container under the fuel valve and set the fuel supply valve to 'ON'.

- The fuel in the tank will drain into the container.

5. Replace the 'O' ring and valve filter and tighten the cup as far as possible.

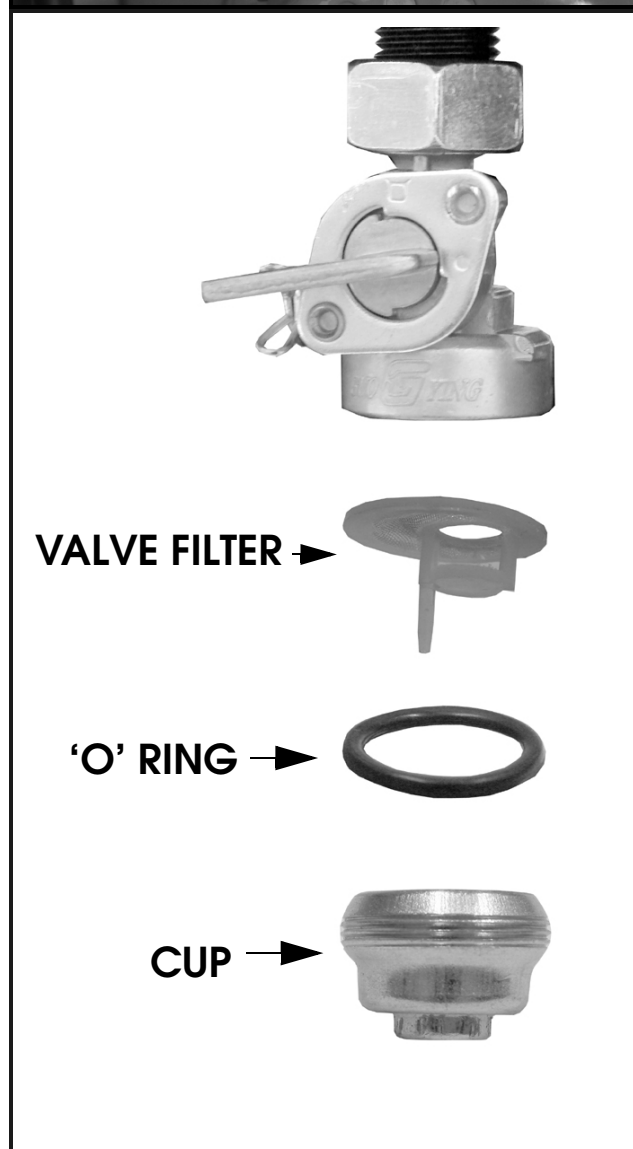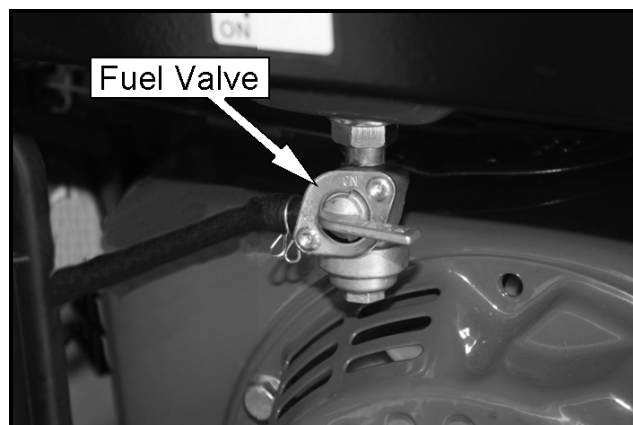

TROUBLESHOOTING


PROBLEM	CAUSE	SOLUTION
The generator fails to start	Ignition switch is off	Set the ignition switch to 'on'
	Not enough oil in the generator	Add more oil, See page 8
	No fuel	Add more fuel, See page 9
	Spark plug not working correctly	Change the spark plug, See page 15
The generator fails to generate electricity	The device you are trying to power is faulty	Make sure the device you want to power is working properly
	The AC breaker is switched off	Switch the AC breaker on
The generator is difficult to start	The air filter is dirty	Clean the air filter, See page 16
	The fuel filter is blocked	Clean the fuel filter, See page 17

If this does not solve your problem, please contact the CLARKE service department.

SPECIFICATIONS

		PG3800ADV
Engine	Engine Model	PT170F1
	Fuel Type	Petrol
	Displacement (cm ³)	212 cc
	Max. power output (hp/rpm)	5.6 @ 3000 rpm
	Start system	Hand recoil
	Fuel tank capacity (L)	15
	Fuel consumption (L/hr.)	1.9
	Maximum run time (h) @75% Load	8.2
	Engine oil capacity (L)	0.61
	Guaranteed sound power (LWA dB)	96
Generator	Rated Frequency (Hz)	50
	AC Output Voltages (V)	230V (16A), 115V (16A), 115V (32A)
	Rated Power (W)	2700
Dimensions	Length (mm)	600
	Width (mm)	480
	Height (mm)	445
	Unpacked Weight (kg)	43.75

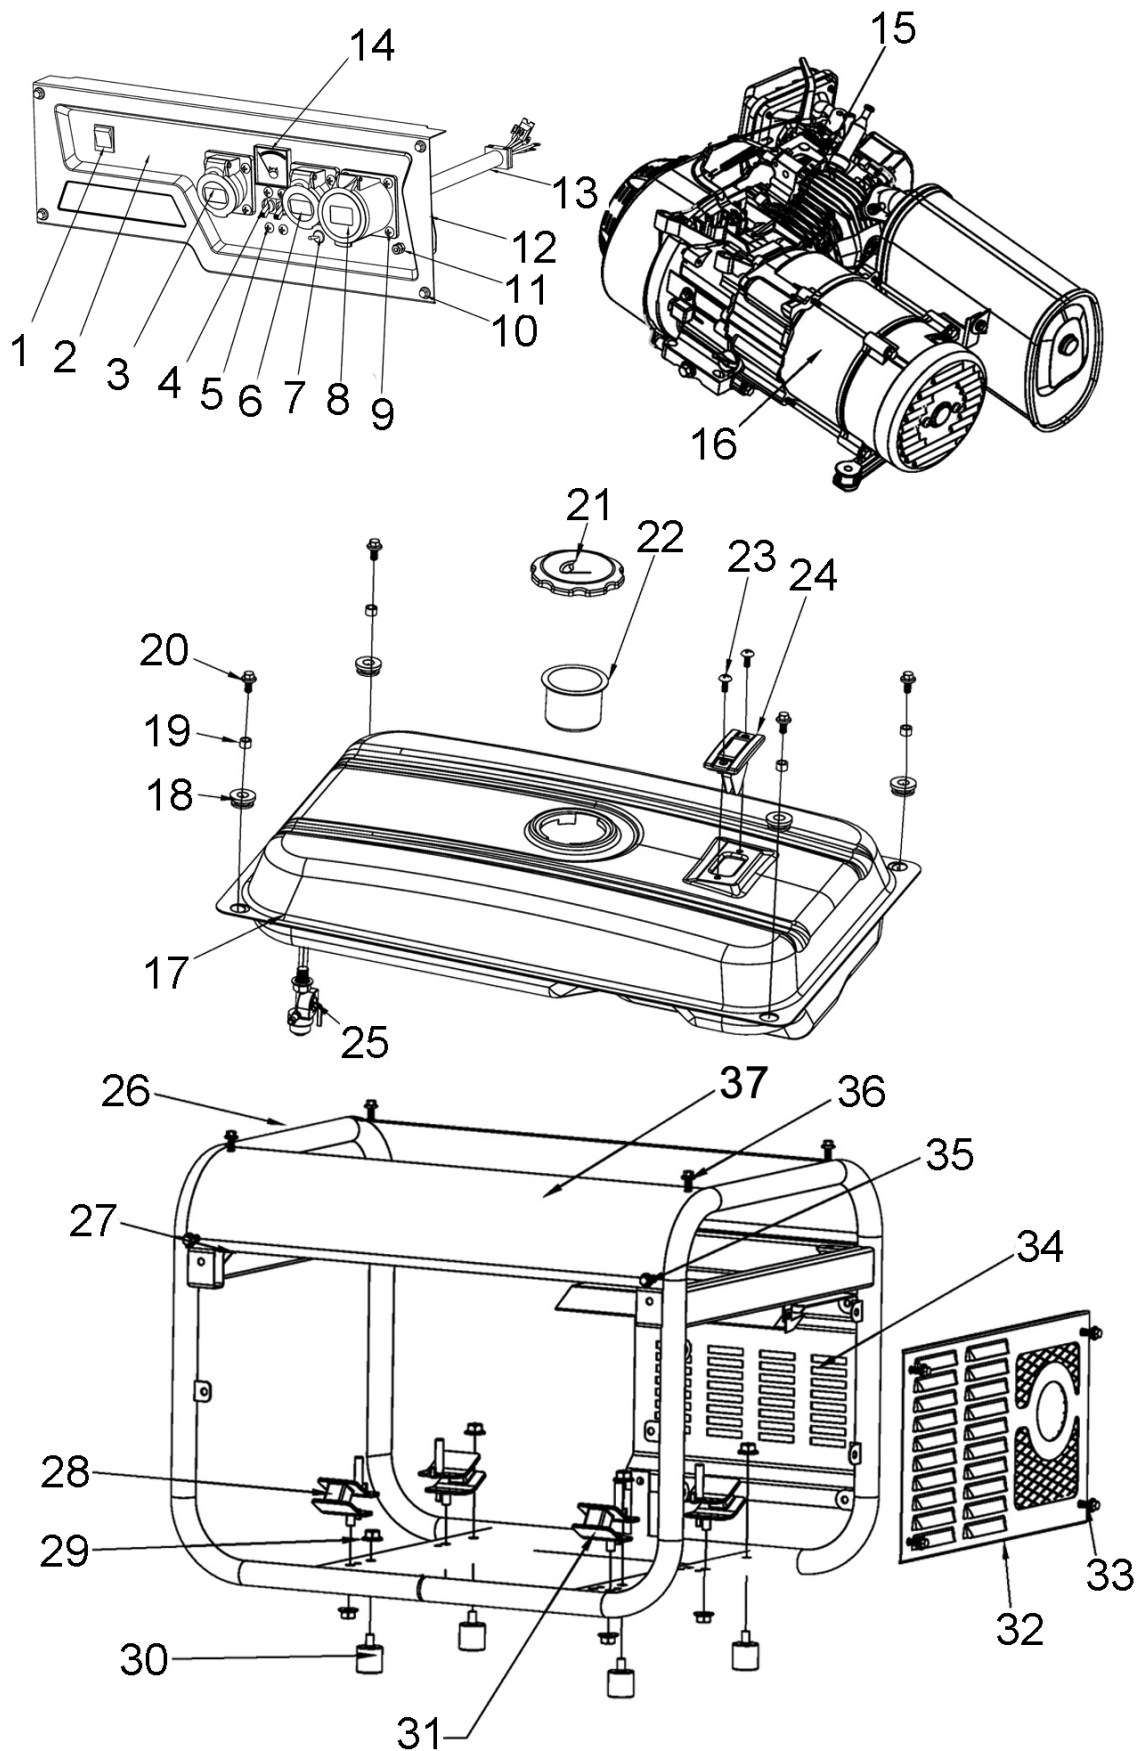


EXPLODED DIAGRAM





PARTS LIST

No	Description	No	Description
1	Switch	20	Bolt M6x25
2	Panel	21	Fuel Filler Cap
3	230V/16A Socket	22	Fuel Filter
4	Circuit Breaker	23	Screw M5x12
5	Screw M3x8	24	Fuel Gauge
6	115V/16A Socket	25	Fuel Valve
7	Voltage Selector	26	Frame
8	115V/32A Socket	27	Cross Beam
9	Bolt M4x12	28	Anti Vibration Foot (LH)
10	Bolt M6x12	29	Flange Nut M8
11	Earth Bolt	30	Rubber Feet
12	Panel Back Cover	31	Anti Vibration Foot (RH)
13	Wiring Loom	32	Back Guard Plate
14	Voltmeter	33	Flange Bolt M6x12
15	Engine	34	Side Guard Plate
16	Generator	35	Flange Bolt M6x12
17	Fuel Tank	36	Flange Bolt M6x35
18	Rubber Gasket	37	Upper Guard Plate
19	Washer		

DECLARATION OF CONFORMITY - UKCA

	 <p>Hemncall Street, Epping, Essex CM16 4LG</p>
<p>DECLARATION OF CONFORMITY</p> <p>This is an important document and should be retained.</p>	
<p>We hereby declare that this product(s) complies with the following statutory requirement(s):</p> <ul style="list-style-type: none"> <i>Electromagnetic Compatibility Regulations 2016</i> <i>Supply of Machinery (Safety) Regulations 2008</i> <i>Noise Emission in the Environment by Equipment for Use Outdoors Regulations 2001</i> <i>The Non-Road Mobile Machinery (Type-approval and Emission of Gaseous and Particulate Pollutants) Regulations 2020</i> <i>The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012</i> 	
<p>The following standards have been applied to the product(s):</p> <ul style="list-style-type: none"> <i>EN 55012:2007/A1:2009, EN 61000-6-1:2007, EN IEC 61000-6-1:2019, EN ISO 8528-13:2016,</i> <i>EN 62321-1:2013, EN 62321-2:2014, EN 62321-3-1:2014, EN 62321-4:2014, EN 62321-5:2014,</i> <i>EN 62321-6:2015, EN 62321-7-1:2015, EN 62321-7-2:2017, EN 62321-8:2017</i> 	
<p>The technical documentation required to demonstrate that the product(s) meet(s) the requirement(s) of the aforementioned legislation has been compiled and is available for inspection by the relevant enforcement authorities.</p>	
<p>The UKCA mark was first applied in: 2023</p>	
<p>Signed: </p> <p style="text-align: right;">J.A. Clarke Director</p>	
<p>PG3800ADV UKCA Clarke DOC 010523 F Page 2 of 2</p>	

	 <p>Hemncall Street, Epping, Essex CM16 4LG</p>
<p>DECLARATION OF CONFORMITY</p> <p>This is an important document and should be retained.</p>	
<p>Product Description: Petrol Powered Generator</p> <p>Model number(s): PG3800ADV</p> <p>Serial / batch Number: 8857854</p> <p>Date of Issue: (Noise Conformity) 05/01/2023</p> <p>Notified Body: N.B 0036 TUV SUD Industrie Service GmbH Westendstraße 199 80686 Munchen Germany</p>	<p>Technical Documentation Holder: Alan Pond Clarke International Ltd Hemncall Street Epping Essex CM16 4LG UK</p>
<p>Conformity Assessment Procedure: To 2000/14/EC Annex V</p> <p>Manufacturer: Clarke international Ltd</p> <p>Noise Related Value: 2.7 kW</p> <p>Measured Sound Power Level: 94 dB</p> <p>Guaranteed Sound Power Level: 96 dB</p>	
<p>PG3800ADV UKCA Clarke DOC 010523 F Page 1 of 2</p>	

DECLARATION OF CONFORMITY - CE



Clarke
INTERNATIONAL

Fitzwilliam Hall, Fitzwilliam Place, Dublin 2

DECLARATION OF CONFORMITY

This is an important document and should be retained.

Product Description: Petrol Powered Generator
Model number(s): PG3800ADV
Serial / batch Number: 8857854
Date of Issue: 05/01/2023
(Noise Conformity)
Notified Body: NB 0036
TUV SUD Industrie Service GmbH
Westendstrabe 199
80686 Munchen
Germany

Technical Documentation Holder: Alan Pond
Clarke International Ltd
Hemhall Street
Epping
Essex
CM16 4LG
UK

Conformity Assessment Procedure: To 2000/14/EC Annex VI
Manufacturer: Clarke International Ltd
Noise Related Value: 2.7 kW
Measured Sound Power Level: 94 dB
Guaranteed Sound Power Level: 96 dB

PG3800ADV CE-Clarke DDC 010523 F

Page 1 of 2



Clarke
INTERNATIONAL

Fitzwilliam Hall, Fitzwilliam Place, Dublin 2

DECLARATION OF CONFORMITY

This is an important document and should be retained.

We hereby declare that this product(s) complies with the following directive(s):
2014/30/EU Electromagnetic Compatibility Directive
2006/42/EC Machinery Directive
2000/14/EC Noise Emission Directive (amended by 2005/88/EC)
2016/1628/EU Emission of Gaseous Particulates Regulation (with Amendments)
2011/65/EU The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Directive

The following standards have been applied to the product(s):
EN 55012:2007/A1:2009, EN 61000-6-1:2007, EN IEC 61000-6-1:2019, EN ISO 8528-1:3:2016,
EN 62321-1:2013, EN 62321-2:2014, EN 62321-3-1:2014, EN 62321-4:2014, EN 62321-5:2014,
EN 62321-6:2015, EN 62321-7-1:2015, EN 62321-7-2:2017, EN 62321-8:2017.

The technical documentation required to demonstrate that the product(s) meet(s) the requirement(s) of the aforementioned directive(s) has been compiled and is available for inspection by the relevant enforcement authorities.

The CE mark was first applied in: 2015

Signed:


J.A. Clarke
Director

PG3800ADV CE-Clarke DDC 010523 F

Page 2 of 2

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS



AIR COMPRESSORS
From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS
Prime duty or emergency standby for business, home and leisure.

POWER WASHERS
Hot and cold, electric and engine driven - we have what you need

WELDERS
Mig, Arc, Tig and Spot.
From DIY to auto/industrial.

METALWORKING
Drills, grinders and saws for DIY and professional use.

WOODWORKING
Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS
Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS
Submersible, electric and engine driven for DIY, agriculture and industry.

POWERTOOLS
Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS
All sizes for car and commercial use.



PARTS & SERVICE: 0208 988 7400

Parts Enquiries
Parts@clarkeinternational.com

Servicing & Technical Enquiries
Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com